

CONTENTS

1.	eCAFÉ™ – TAKE IT TO GO!	2
1.1.	Handling your ultra-mobile personal computer	3
1.2.	A comprehensive package.....	3
1.3.	A closer look at your eCAFÉ™	4
2.	THE eCAFÉ™, UNEQUALLED AND UNRIVALLED	5
2.1.	My eCAFÉ™	5
2.2.	Multifunction keyboard	8
2.3.	An ultra-mobile computer suited to large files	9
2.4.	Extensive connectivity options for countless applications	9
2.5.	A desktop device AND a mobile device	11
2.5.1.	<i>Operating the eCAFÉ™ when connected to the mains</i>	<i>11</i>
2.5.2.	<i>Operating the eCAFÉ™ with the built-in battery</i>	<i>12</i>
2.5.3.	<i>Installing and removing the battery</i>	<i>12</i>
2.5.4.	<i>Optimising your use of the battery</i>	<i>13</i>
3.	FIRST STEPS WITH MY eCAFÉ™	15
3.1.	Turning the eCAFÉ™ On/Off	15
3.2.	Mastering the touchpad	16
3.3.	Accessing the help interface	17
3.4.	Adjusting the main settings	17
3.4.1.	<i>eCAFÉ™ Connect and the WiFi feature.....</i>	<i>17</i>
3.4.2.	<i>Printers</i>	<i>18</i>
3.4.3.	<i>Customising the interface's appearance</i>	<i>18</i>
4.	MULTIMEDIA	19
4.1.	Viewing and organising your photos	19
4.2.	Viewing videos	22
4.3.	Listening to music	25
4.4.	Using the webcam	29
	TECHNICAL SUPPORT	32
	WARRANTY INFORMATION	33

1. eCAFÉ™ – TAKE IT TO GO!

Thank you for trusting Hercules by choosing to purchase the eCAFÉ™ ultra-mobile personal computer. The eCAFÉ™ has been designed to allow you to communicate and create or edit documents such as text files, slideshows or even images; it also includes advanced multimedia features designed to entertain you.

To make the most of your eCAFÉ™ ultra-mobile personal computer, please follow the instructions provided in this manual.

To make the most of your product, please refer to the PDF manual located on your eCAFÉ™'s hard disk drive (it is stored in the directory that contains your personal files, "MyFiles").

Whether you are a beginner or a seasoned computer user, you will no doubt find what you are looking for among the available worlds (Communications, Games, Multimedia, Work and Settings). You will also learn how to connect to a wireless network and access the Internet using your ultra-mobile personal computer's WiFi feature, learn how to communicate with your friends using the messaging applications, how to view photos, play movies, listen to music, play and work and customise your eCAFÉ™'s worlds.



Some operations that you can perform on your eCAFÉ™ will require you to provide a password. The default user account password is "ec-800", and the administration account password is "root".

You can change these passwords in the **Security** thumbnail of the **Computer Configuration** application.

1.1. Handling your ultra-mobile personal computer



Please read this section with care before using the product.

Like any electronic device, the eCAFÉ™ requires you to observe a number of simple safety rules; these are listed below. In addition, observing some simple precautions will enable you to extend your eCAFÉ™'s life.

- In no circumstance should you attempt to open the eCAFÉ™, its adaptor or its components; doing this would expose the device's internal components to damage. Likewise, never attempt to open the device's batteries.
- Use only the adaptor provided with the product.
- Always place your eCAFÉ™ on a horizontal, stable and flat surface.
- Never exert pressure on the display. Never touch the display with any objects that are liable to damage it or scratch it.
- Always make sure that you have removed any objects placed on the device's keyboard (e.g. USB key, pen or others) before closing your eCAFÉ™'s display.
- To avoid any risk of fire or electric shock, always keep your eCAFÉ™ away from:
 - Rain or moisture, as well as all fluids (water, chemical products and any other liquids),
 - Heat sources such as radiators, cookers or other heat-emitting devices (including amplifiers),
 - Direct sunlight.
- This product should be used only at temperatures ranging from 5 to 35°C.
- Never cover your eCAFÉ™ while the device is powered on.
- Always unplug your eCAFÉ™ before cleaning it. To clean it, use a soft cloth; avoid using chemical sprays.
- The eCAFÉ™ provides a WiFi wireless connection feature. Use of this feature is liable to cause interferences with the equipment located on planes or in hospitals. Always deactivate this feature before entering these premises.
- Always deactivate the WiFi feature during thunderstorms.
- Never throw the device's batteries into an open fire.
- When transporting the eCAFÉ™, always turn the device off if you are carrying it in a closed bag. As a general rule, make sure that your eCAFÉ™ is placed in a well-vented environment when the device is powered on.

1.2. A comprehensive package

Compact design, ultra-lightweight device, powerful connectivity, various accessories included. Discover the packaging contents:

- eCAFÉ™ personal computer
- Battery
- Power adaptor
- Quickstart guide

1.3. A closer look at your eCAFÉ™

 
- AMD Geode LX 800 CPU
- 512 MB DDR RAM
- 8-inch backlit LCD display (16/9 aspect ratio, maximum resolution 1024x600 with interpolation) featuring a 300,000 pixel built-in webcam and a built-in microphone
- Built-in graphics board featuring 128 MB shared memory
- Built-in sound board
- Built-in 802.11 b & g WiFi board
- 1.8-inch 20 GB P-ATA hard disk drive
- 4,000 mAh rechargeable Lithium battery (4 cells)
- 100-240 V, 50/60 Hz power adaptor
- 2 USB 2.0 ports (compatible with USB 1.1 devices)
- 10/100Mbps Ethernet port
- VGA output
- 1 headphones connector, 1 microphone connector
- 80-key keyboard
- Touchpad featuring 2 buttons
- Multiple-format card reader: SD (Secure Digital), SD HC (Secure Digital HC), MS (Memory Stick and Memory Stick ProDuo), MMC (MultiMedia Card)
- Weight: less than 1 kg (battery included)
- Dimensions: 227.5x164x40.5 mm

The included operating system is specific to your eCAFÉ™. It is based on the latest Linux Mandriva operating system, and includes all the essential applications you may require to you use your ultra-mobile personal computer at home or "on the road". It can however be extended via the "Computer Configuration" application.


2. The eCAFÉ™, UNEQUALLED AND UNRIVALLED

The eCAFÉ™ ultra-mobile personal computer features a very wide range of applications and extensive connectivity interfaces, which will enable you to instantly connect to the world that is best suited to your use: work, communications, games or multimedia.

2.1. My eCAFÉ™

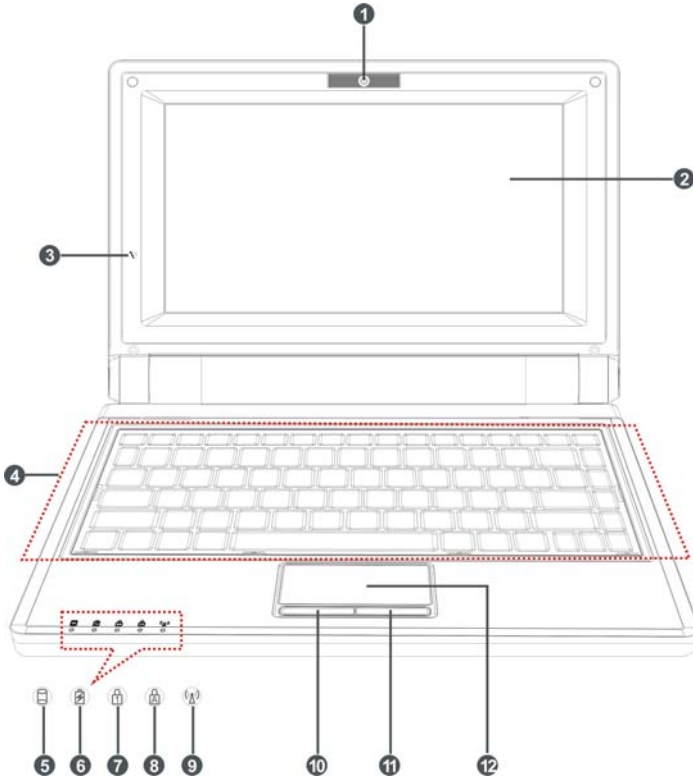


- | | | |
|-----------------------|---------------------------------------|----------------------------|
| 1. Webcam | 5. Hard disk drive activity indicator | 9. WiFi activity indicator |
| 2. 8-inch LCD display | 6. Battery charge status indicator | 10. Left touchpad button |
| 3. Microphone | 7. Keypad lock | 11. Right touchpad button |
| 4. English keyboard | 8. Caps lock | 12. Touchpad |

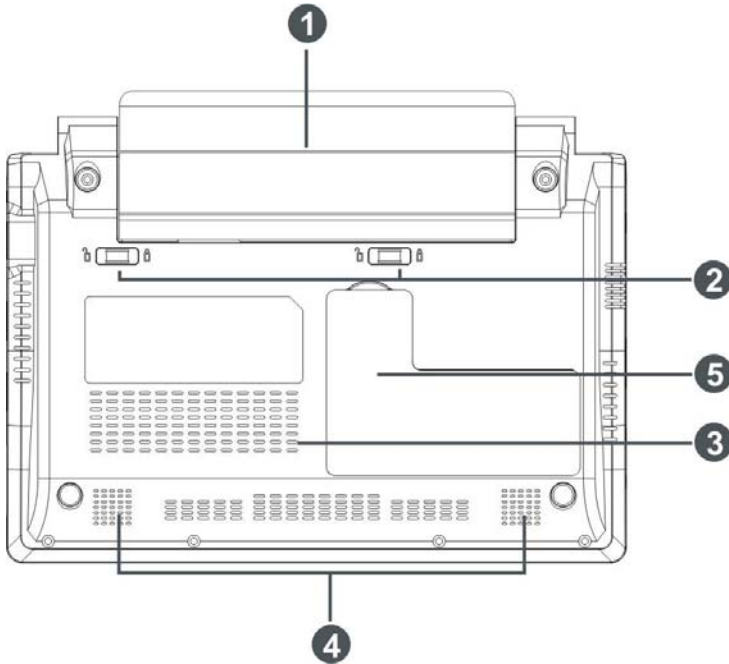 


- 1. Removable battery
- 2. Battery locking tabs
- 3. Warm air extraction grate
- 4. Loudspeakers
- 5. DDR RAM location



 This part of your eCAFÉ™ is liable to heat during operation and charging. This is normal. However, to improve thermal dissipation, we recommend you do not block the vents. Avoid placing your eCAFÉ™ on a soft surface such as a sofa or a bed, for instance.

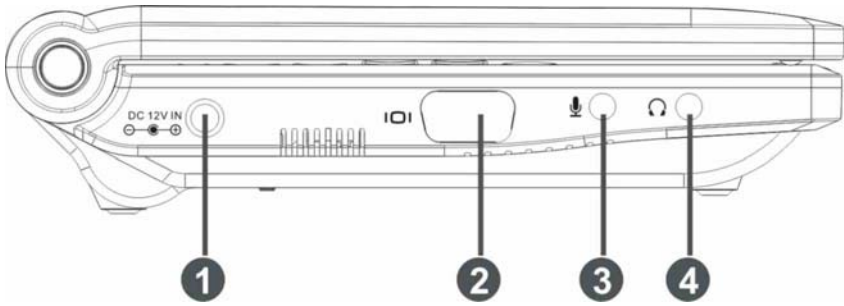

 - 1. Power supply port
- 2. VGA output connector
- 3. Microphone input connector
- 4. Headphones connector

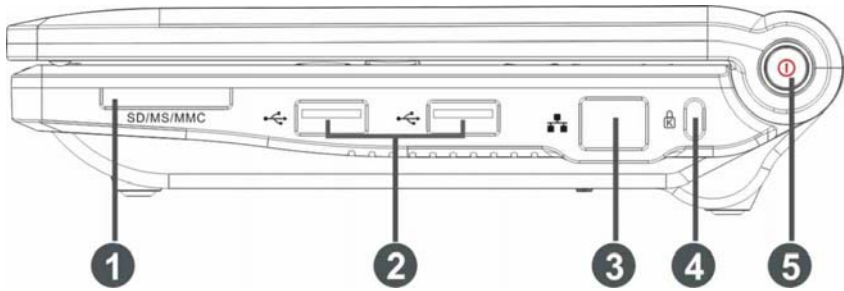

- 1. SD/SD HC/MS/MMC memory card reader
- 2. USB 2.0 ports
- 3. LAN/Ethernet port
- 4. Kensington® lock
- 5. Power On/Off button

2.2. Multifunction keyboard

The eCAFÉ™ features an extended keyboard, which allows you to adjust the device's display settings as well as the multimedia application parameters.



Activate/Deactivate WiFi feature (default is inactive)



Stop playback



Activate/Deactivate audio output



F11 key: enables you to access features specific to certain applications



Reduce volume



F12 key: enables you to access features specific to certain applications



Increase volume



Switch from the LCD display to an external display



Play/Pause a movie or a music track (feature specific to certain applications)

For more information regarding the screen resolution, please refer to the Personalisation Wizard in the PDF manual, section 3.7.2. **Extensive contents to take you further.**



Return to previous track/previous chapter (feature specific to certain applications)



Reduce display brightness



Move to following track/following chapter (feature specific to certain applications)



Increase display brightness

2.3. An ultra-mobile computer suited to large files

Equipped with a hard disk drive and a multiple-format card reader, the eCAFÉ™ enables you to take your most precious files with you, regardless of their size.

Hard disk drive

 
The eCAFÉ™ features a 20 GB (or more, according to versions) hard disk drive. This storage capacity allows you to save movies, images and other large files to your device.

Memory card reader

The eCAFÉ™ is equipped with a multiple-format memory card reader supporting SD and SD HC (Secure Digital), MS (Memory Stick®), MMC (MultiMedia Card) formats; this device enables you to view pictures taken with your digital camera or to extend your system's storage capacity, for instance.

USB ports

The eCAFÉ™ is also equipped with two USB ports that enable you to connect a USB storage key or other USB devices (for further information regarding USB ports, please refer to section 2.4, "Extensive connectivity options for countless applications").

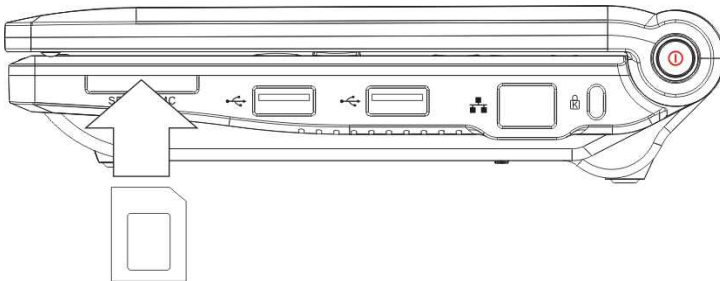

2.4. Extensive connectivity options for countless applications

The ports and connectivity interfaces built into your eCAFÉ™ enable you to connect all kind of USB peripherals, such as a mouse or an external hard disk drive, to your ultra-mobile personal computer.

General safety rules

 
Before connecting a peripheral to your ultra-mobile personal computer, please refer to the installation instructions provided with the device.




Never remove a peripheral while your eCAFÉ™ is reading or saving data; you would risk destroying the data beyond repair.

USB ports (Universal Serial Bus)

The eCAFÉ™ features two USB 2.0 ports (USB 1.1 compatible), to which you can connect many peripherals such as a keyboard, a mouse, a USB key and more. This interface is hot-swappable, allowing you to connect and remove your peripheral without having to first shut it down.

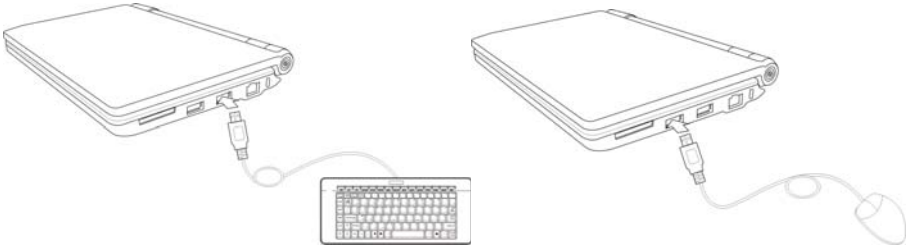

If you have connected a USB external hard disk drive to your eCAFÉ™, please click on the  icon (located in the lower right section of the screen) and select "Remove media" prior to disconnecting your peripheral.



The system may fail to recognise some USB peripherals if they have been connected during the computer's startup phase. Should this be the case, please remove the device from your ultra-mobile personal computer and connect it again.

Audio connectors

 
To initiate a communication or view a video, please connect a microphone, headphones and/or a headset featuring a built-in microphone to the relevant connector:

- The jack output connector to connect headphones or a headset
- The jack input connector to connect an MP3 player for recording purposes, or a microphone to record vocal data or chat with your contacts using a voice-over-IP application



Local Area Network (LAN)

The eCAFÉ™ is equipped with a RJ45 LAN connectivity interface, which enables you to connect it to a 10/100 Mbps wired network (corporate network, router, wired modem & router or Internet box, for instance).

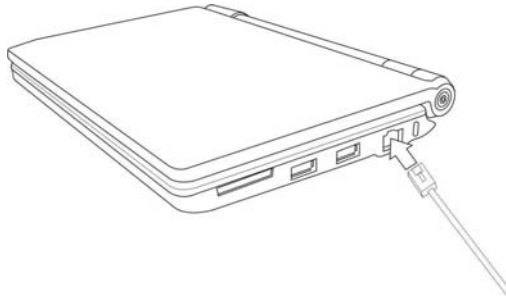

2.5. A desktop device AND a mobile device

 
Both a desktop device and a mobile device at once, the eCAFÉ™ can be used everywhere thanks to its dual power supply (mains or battery).

2.5.1. Operating the eCAFÉ™ when connected to the mains

Use the included power adaptor to power your eCAFÉ™. The device complies with the specifications of the electric network in the country in which the device was purchased.



Please make sure that the power supply plug is fully engaged into the computer's power supply connector.

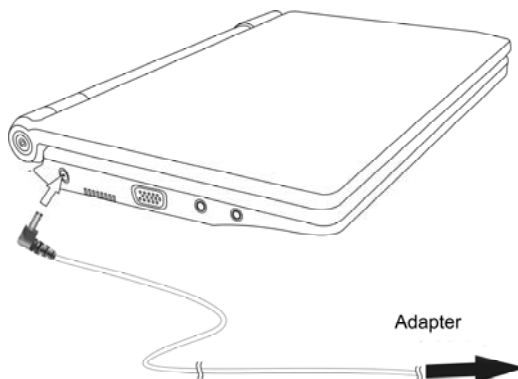

When the eCAFÉ™ is connected to the mains, the device's battery starts to charge automatically. Please note that fully charging the eCAFÉ™ while the device is in use requires more time than when the eCAFÉ™ is turned off.

2.5.2. Operating the eCAFÉ™ with the built-in battery

The eCAFÉ™ is designed to operate on its built-in battery. When fully charged, the built-in battery guarantees ample autonomy (over three hours*). You can purchase additional batteries from your sales output.



 
To extend your battery's lifespan, we recommend that you charge it fully when using your eCAFÉ™ for the first time. Please refer to the battery charge status indicator for more information regarding the battery charge level.

2.5.3. Installing and removing the battery

You may need to install or remove the battery, e.g. when replacing the battery.



Before installing or removing the battery, place the **locks (2)** in the "Unlocked" position; install or remove the battery, then place the locks in the "Locked" position again.

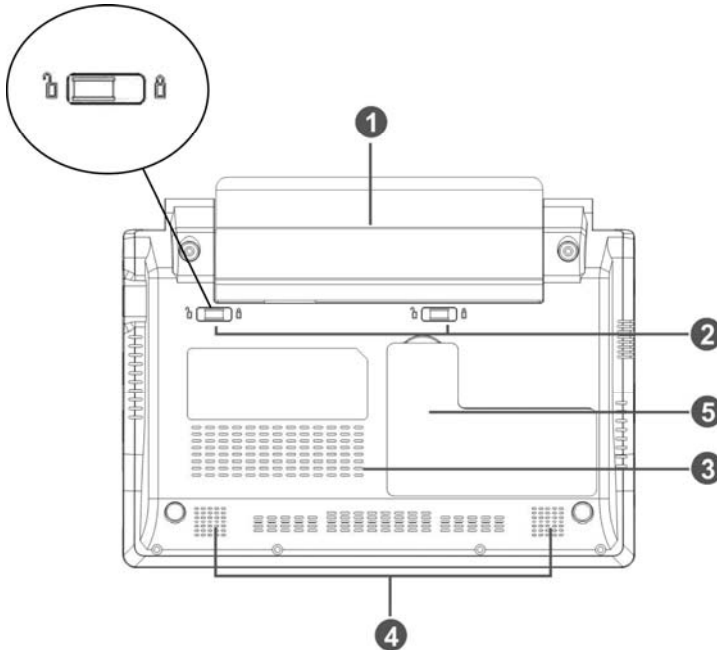

* Autonomy measured during a simulation in which the following uses were made simultaneously or successively: continuous use of a word processing application while importing various files and images, use of games (20 mn), use of the built-in webcam (1 hr), approx. 5 mn standby per hour of use. Autonomy is liable to vary according to the use of the eCAFÉ™.

 


Always shut your eCAFÉ™ down before installing or removing the battery!




Use only **Hercules** batteries that are fully identical to the original batteries included with your eCAFÉ™. Failure to comply with these instructions may cause damage to your eCAFÉ™.

Installing the battery

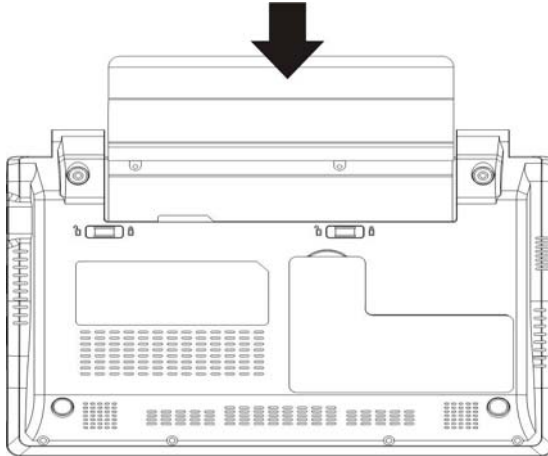

Removing the battery

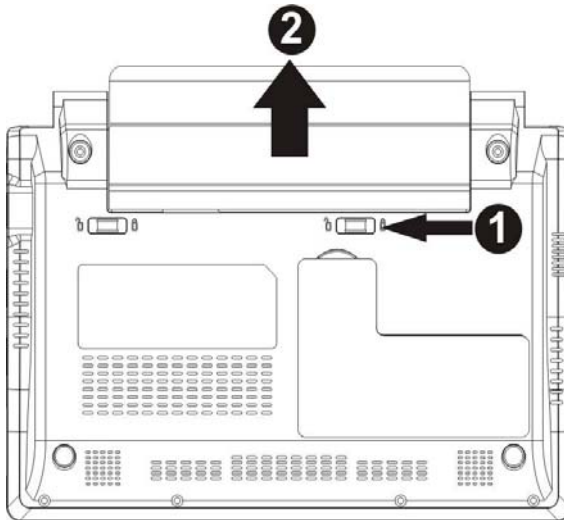 

2.5.4. Optimising your use of the battery

To extend your ultra-mobile personal computer battery's lifespan:

- Adjust the display's luminosity to a level suited to your environment (indoors/outdoors) and to the application that you are using.



Reduce display
brightness



Increase display
brightness

- Close the display when you are not using your eCAFÉ™ for a short time. The display will automatically turn off.

- When using your eCAFÉ™ for the first time, always charge the battery entirely.

- Deactivate the WiFi feature if you are not accessing a WiFi network.



 
Deactivate the WiFi
feature

3. FIRST STEPS WITH MY eCAFÉ™

3.1. Turning the eCAFÉ™ On/Off

Turning the device on


- Open the display (1) and press the On/Off button located on the right-hand side of the device (2).

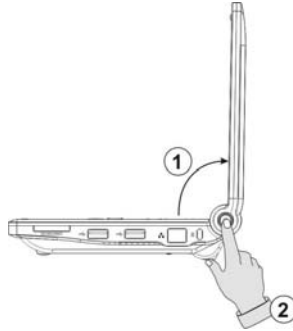

Do not exert excessive strength on the hinges when opening the display. Do not hold your eCAFÉ™ by the display when carrying the device.

Shutting the device down

- Before shutting your eCAFÉ™ down, make sure that all your programs and applications have shut down tidily.

- Shut your eCAFÉ™ down by clicking on the  icon in the lower left-hand section of the screen, then select Shut computer down.





Screensaver mode

Your eCAFÉ™'s display automatically switches to the Screensaver mode when not in use for a certain time. Press on a key or on the touchpad to reactivate it.

Forcing the computer to shut down or restart

If you have trouble starting your computer up, press the device's On/Off button and hold it down until your eCAFÉ™ shuts down.

If an unexpected configuration prevents your eCAFÉ™ from reverting to its initial state when you press

the  key, press keys  +  +  simultaneously. The system will then proceed to restart the various worlds; this quick restart lasts only a few seconds.

 


Do not use the forced shutdown or reset procedures when files are open. Irreparable loss of data may occur in this case.


3.2. Mastering the touchpad

Some actions are confirmed by a single click (activating a button or accessing a menu, for instance):

Either by pressing the left touchpad button once

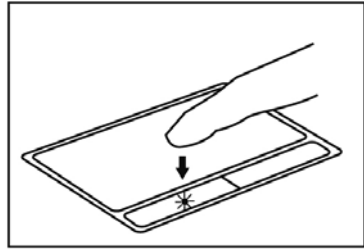


Either by briefly tapping the touchpad

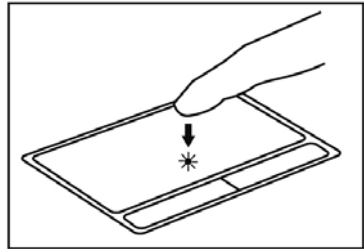 


Other actions are confirmed by means of a double-click (opening audio or video contents or a document, for instance):

 Either by pressing the left touchpad button twice

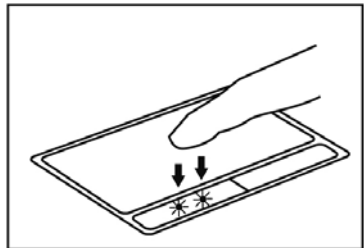

 Either by briefly tapping the touchpad twice

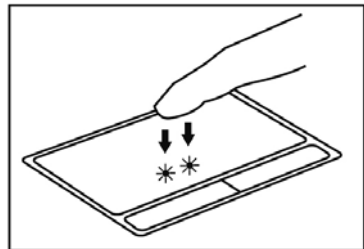

The **right touchpad button** is generally used to access the selected object's properties.

3.3. Accessing the help interface

This guide is available in the "User's Manual" PDF file located on your eCAFÉ™'s hard disk drive (in the folder named "MyFiles", which contains your personal files).

Specific help is also available within each installed application. Please refer to the relevant help section if necessary.

3.4. Adjusting the main settings

3.4.1. eCAFÉ™ Connect and the WiFi feature



Launch eCAFÉ™ Connect from the Communications world
Option no. 1



Launch eCAFÉ™ Connect from the status bar
Option no. 2

 


Activate/Deactivate the WiFi feature




eCAFÉ™ Connect is a software application developed by Hercules, which enables you to manage your network connections (both Ethernet and WiFi) in a user-friendly, intuitive way. It is the essential complement of the eCAFÉ™'s built-in WiFi board.


To access eCAFÉ™ Connect (option no. 2):

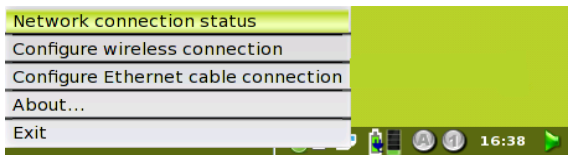- Right-click on the Hercules eCAFÉ™ Connect icon located in the status bar using the right touchpad button.



- Select **Network connection status**.

- Activate your eCAFÉ™'s WiFi feature by pressing on keys  and . The computer's WiFi indicator  should light up.

 This feature is not activated when the system starts up, and the WiFi indicator is off.



- Click on the **Connect** button facing the wireless connection.

You will now access the WiFi connection manager named eCAFÉ™ Connect WiFi Station. For more information regarding the WiFi connection manager, and for more information on how to connect to a WiFi network and store your favourite networks on your computer, **please refer to section 4.1.1., "Connecting to the Internet... using the WiFi feature"**.

3.4.2. Printers

Access the **Settings** world, then click on **Computer Configuration**.

The **Control Centre** displays. Select the **System** thumbnail, then click on the **Configure printer(s) icon**. Follow the instructions displayed onscreen.

3.4.3. Customising the interface's appearance



Launch the Personalisation Wizard.

The Personalisation Wizard enables you to easily add quick access links to your favourite applications, or to customise the appearance of the Home world by changing the background image. This application is accessible via the icon located in the upper left-hand section of the screen.

 
To **add quick access links**, access the **Desktop** thumbnail and select your world (upper left-hand section of the screen). This list of applications currently featured in this world displays onscreen. To add an application, select the chosen application in the right-hand list and drag it towards the world.

To **change the background image**:

- Access the **Desktop** thumbnail.
- Select the **Home** world.
- Click on the image that appears at the bottom of the window, then click on the **Browse** button.
- Select the location of your image file (the recommended image size for optimum display quality is 1024x768 pixels).
- Click on **OK** to apply the new background image.

4. MULTIMEDIA

Access the **Multimedia** world.

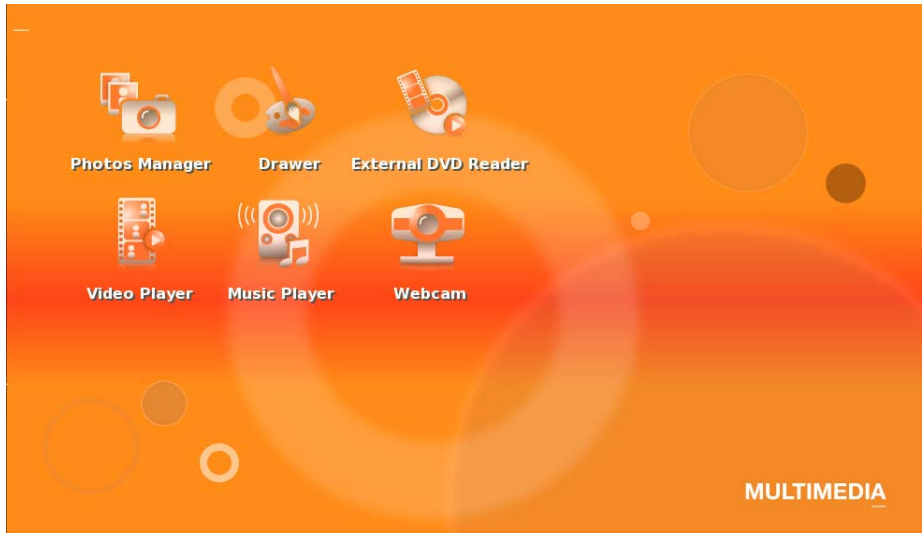


4.1. Viewing and organising your photos



Launch the Photos application

Your eCAFÉ™ features a comprehensive photo management tool. You can import new photos, sort your photos by date or tag them in order to sort them by category.

 The following pages provide a description of this application's main features.

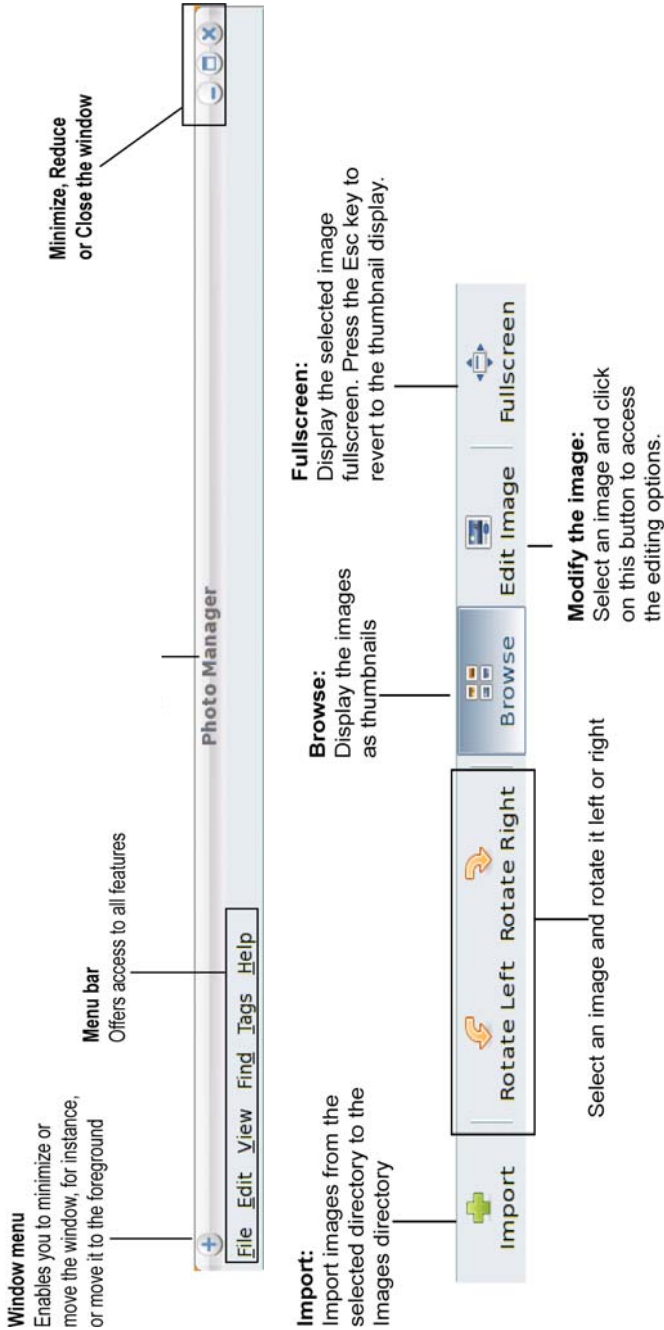

List of predefined tags

A tag is a marker that can be connected to an image or a group of images to make them easier to sort. Simply drag one of the tags onto the image.

Timeline

Once imported, the images are sorted by date (year and month). Click on one of the cells to display its contents. The more the cell is filled (in blue), the more images it contains. A white cell contains no images.

The screenshot displays the eCAFÉ software interface. At the top left, there is a list of predefined tags: Favoris (heart icon), Masqué (lock icon), Lieu (globe icon), Personnes (group of people icon), and Événements (clock icon). Below this list is a metadata panel with fields for name, version, date, size, and exposure. The main area features a timeline for the year 2008, with a calendar grid showing dates from 24/07/2008 to 24/08/2008. A grid of seven photos is displayed below the timeline, each with its date. The photos show various scenes: a sunset over water, a sunset with a person's silhouette, a sunset over a beach with palm trees, a sunset with palm trees, a sunset over a beach, a sunset over a beach with a person, and a sunset over a beach with a person. The interface also includes a search bar and a '7 Photos' indicator at the bottom right.

Information regarding the selected tag

4.2. Viewing videos

 


Launch the Videos application

Thanks to the multimedia player included on your eCAFÉ™, you can take your favourite movies with you and view your favourite videos and home-made holiday movies. To save time and access your favourite videos directly, you can also create playlists easily.

The multimedia player is compatible with MPEG, WMV and WMA formats and the most frequently video formats available on the Internet.


The following pages provide a description of this application's main features.

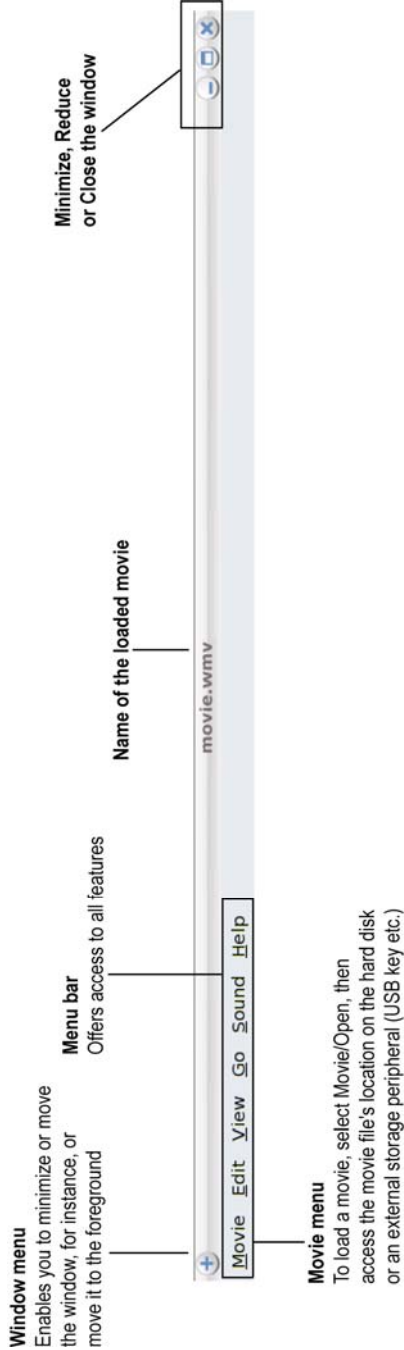

Playlist:

Displays the list of your favourite movies; you can access these instantly. Your movies can be stored on various storage media (hard disk drive, memory card, USB key). If the memory card or the USB key on which the movie is stored is not inserted in your eCafé™, you will not be able to read the movie.

 Movie viewing window

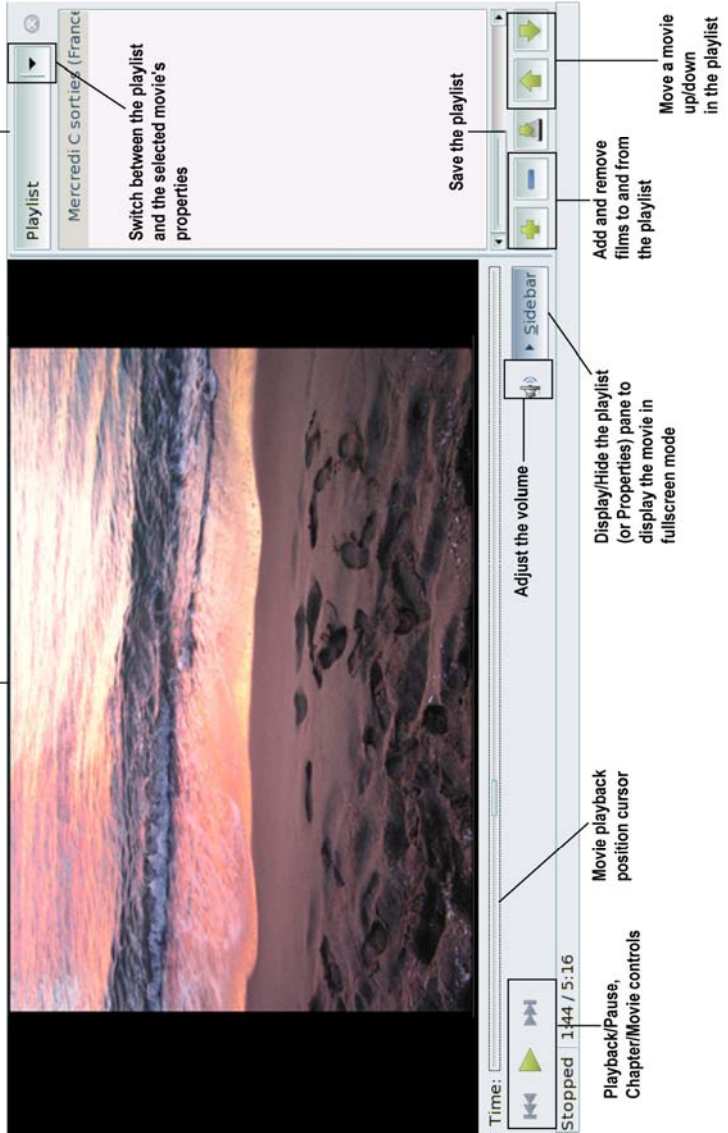

Playlist

Mercredi C. sortiez (France)
Switch between the playlist and the selected movie's properties

Save the playlist

Sidebar

Adjust the volume

Display/Hide the playlist (or Properties) pane to display the movie in fullscreen mode

Add and remove films to and from the playlist

Move a movie up/down in the playlist

Time: Stopped 1:44 / 5:16

Playback/Pause, Chapter/Movie controls

Movie playback position cursor

 
4.3. Listening to music

 


Launch the Music application

Enjoy a genuine digital music player including extensive playback, import and playlist creation functions. If you are constantly looking for new audio contents, subscribe to podcast streams and never miss your favourite radio program again, or create your own personal list of Internet radio stations.

The following pages provide a description of this application's main features.

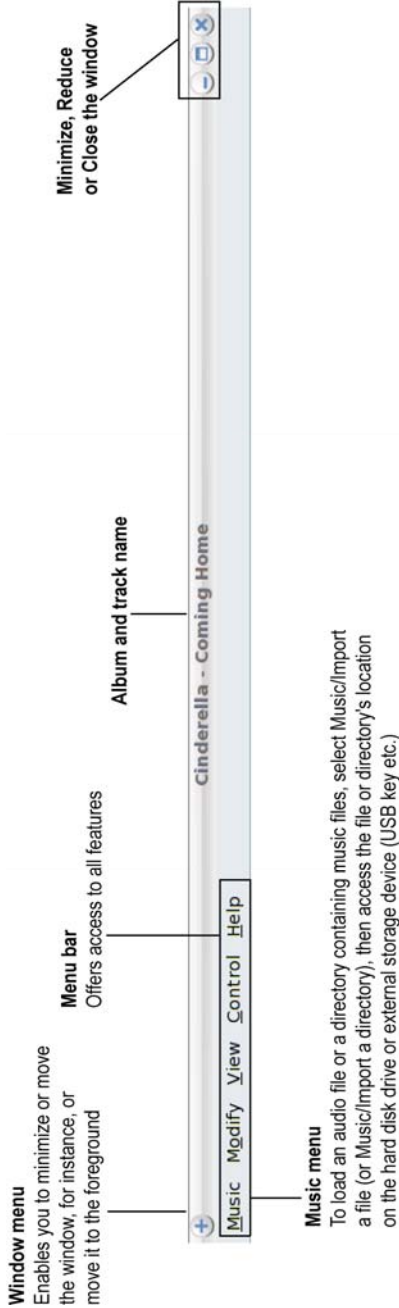

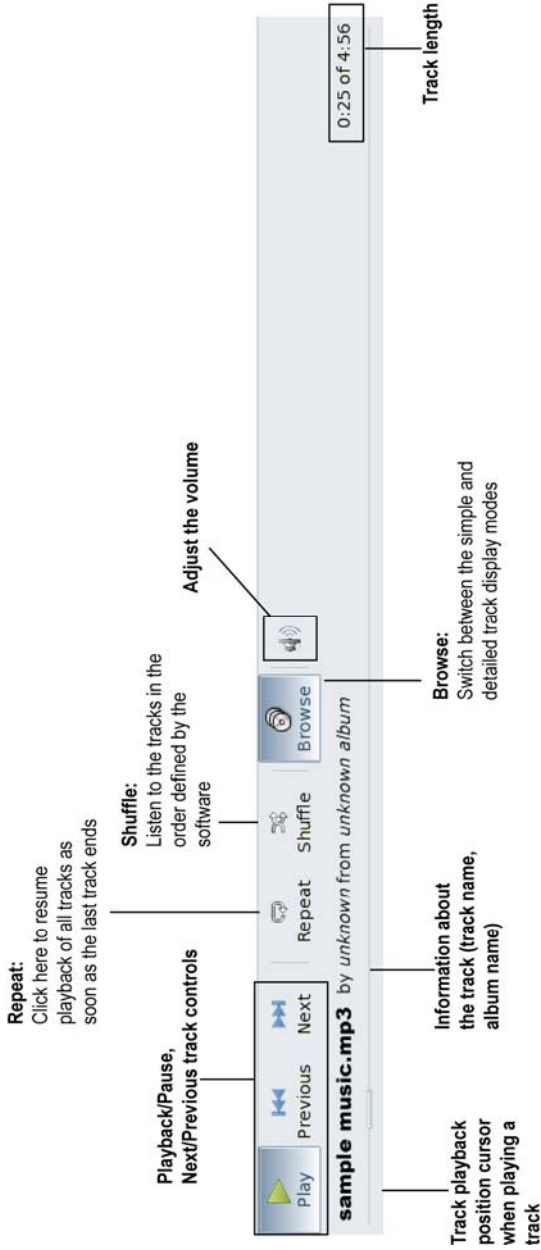

Quick access to libraries, shops, webradios and playlists

Search criteria:
Display the results matching all criteria (artists, albums and tracks), or only the albums, the artists or the tracks

Specific track search area:
Enter part of the name or the full name to display all matching tracks

The screenshot shows the eCAFÉ music player interface. At the top left, there is a navigation bar with icons for Library, Play Queue, Music, Podcasts, Radio, and Stores. Below this are links for Jamendo and Magnatune. A CD icon is visible on the right side of the top bar. The main search area is divided into two sections. The top section is labeled 'Search:' and contains a search bar with the text 'Artist' and a list of results: '1 artist (1)' and 'artist'. The bottom section is labeled 'Album' and contains a list of results: '1 album (1)' and 'album'. To the right of the search results, there is a table with columns for Track, Title, Genre, Artist, Album, and Time. The table contains one row of data: Track 8, Title Title, Genre Metal, Artist Artist, Album Album, and Time 4:56. At the bottom right of the interface, there is a status bar that reads '1 song, 4 minutes, 7.3 MB'. Three lines with arrows point from the text annotations to specific parts of the interface: one to the top navigation bar, one to the search bar, and one to the search criteria text.

 
4.4. Using the webcam




Starting the webcam

Explore another side of digital communications thanks to the webcam built into your eCAFÉ™: take pictures and record video sequences with unrivalled ease thanks to the included software.

The following pages provide a description of this application's main features.

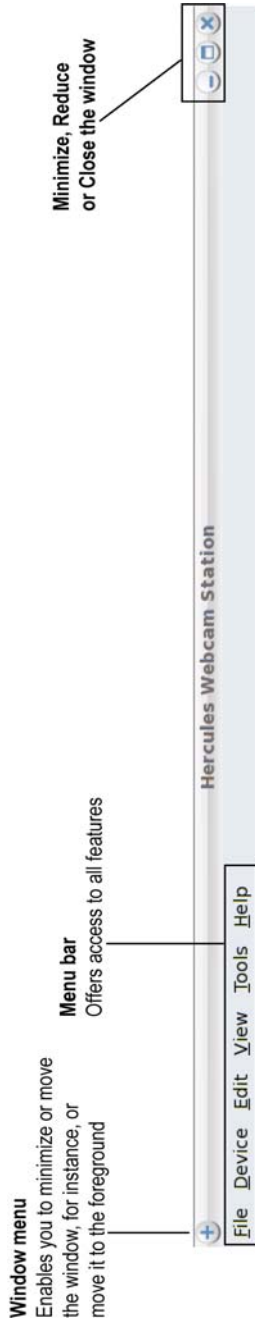

- Save the image:**
Take a snapshot when you want to. The image is automatically saved in the directory defined in the Preferences.
- Pause:**
Freezes the image
- Save a video:**
Click on this icon to launch the recording of a video sequence. Click again to stop the recording. The sequence is automatically saved in the directory defined in the Preferences.
- Fullscreen:**
Display the image fullscreen
- Camera settings:**
Access the various settings: brightness, contrast, saturation etc.
- Preferences:**
Select the location in which you wish to save the captured images and video sequences, define the video quality, choose whether you wish to include sound in the recording

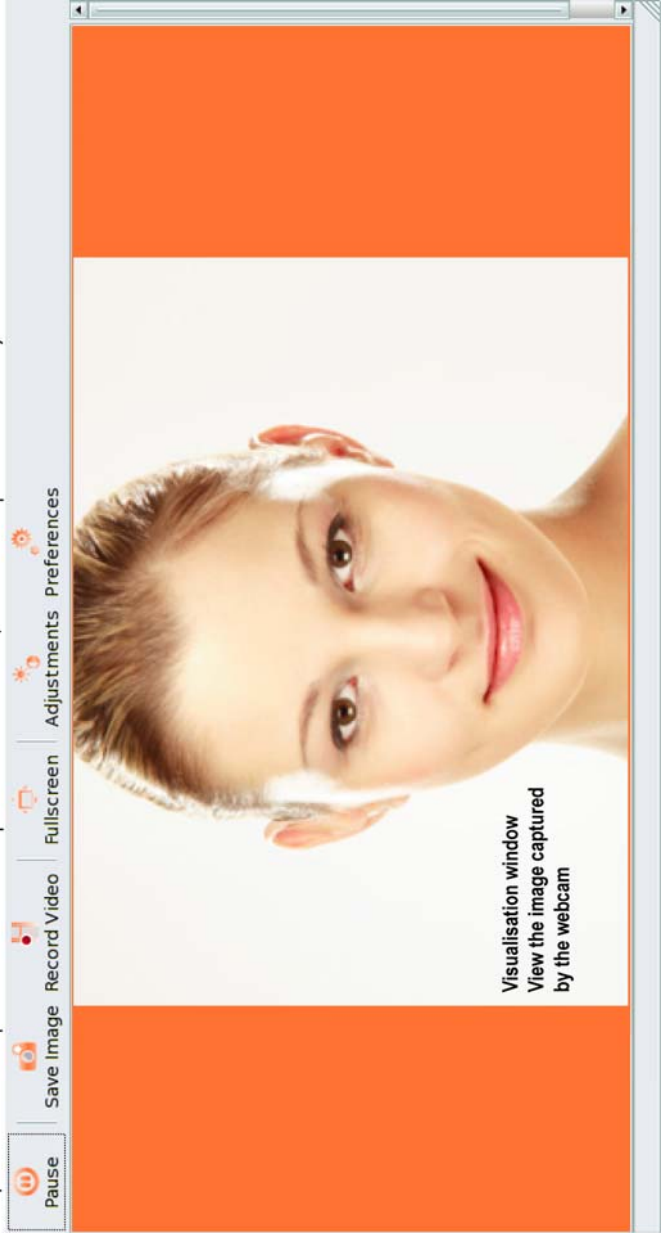 

TECHNICAL SUPPORT

If you have trouble using your device or one of its components, please connect to the <http://ts.hercules.com/fr> website and select your language. Here, you will be able to access different services (Frequently Asked Questions (FAQs), the latest versions of all available drivers and software) that may help you solve your problem. If this fails to solve the problem, please get in touch with Hercules' Technical Support.

Via email:

To reach our Technical Support via email, you must first register online on the <http://ts.hercules.com/eng/index.php> website. The information that you provide will help our technicians solve your problem as swiftly as possible.

Click on **Online Support - FAQ**, then on **Visit the Technical Support website**, then click on **Product registration** and follow the instructions provided onscreen.

If you have already registered your product, please enter your credentials in the **Username** and **Password** fields, then click on **Login**.

By telephone (if you do not have Internet access):

France	0 826 09 21 03 Numéro Indigo® (0.15 € incl. VAT/minute*)	Monday to Friday, from 1.00 PM to 5.00 PM and 6.00 PM to 10.00 PM Saturday from 9.00 AM to 1.00 PM and 2.00 PM to 8.00 PM Sunday from 10.00 AM to 1.00 PM and 2.00 PM to 5.00 PM
Switzerland	0842 000 022 Cost of a local call	Monday to Friday, from 1.00 PM to 5.00 PM and 6.00 PM to 10.00 PM Saturday from 9.00 AM to 1.00 PM and 2.00 PM to 8.00 PM Sunday from 10.00 AM to 1.00 PM and 2.00 PM to 5.00 PM
Belgium	078 16 60 56 Cost of a national call	Monday to Friday, from 1.00 PM to 5.00 PM and 6.00 PM to 10.00 PM Saturday from 9.00 AM to 1.00 PM and 2.00 PM to 8.00 PM Sunday from 10.00 AM to 1.00 PM and 2.00 PM to 5.00 PM

* Suggested price (excl. connection costs)

Connect to the Hercules website (www.hercules.com/fr) now to download the latest versions of all available drivers and software, view the Frequently Asked Questions (FAQs) relevant to your product and download the latest upgrades of your product's User Manual. You can also discover the extensive range of Hercules products and download information about the forthcoming releases.

WARRANTY INFORMATION

Guillemot Corporation S.A. ("Guillemot") guarantees consumers worldwide that this Hercules product is free from material and manufacturing defects for a period of two (2) years beginning on the original date of purchase. Should the product seem defective during the period covered by the warranty, please contact our Technical Support immediately for further information on how to proceed. After contacting our Technical Support, if it appears necessary to return the product to us, please return the product and its accessories in the original packaging, well packaged and protected, according to the instructions provided by our Technical Support.

According to the terms of this warranty, following our Technical Support's decision, the defective product may be repaired or replaced. When authorised by applicable law, any liability incurred by Guillemot and its subsidiaries (including consequential damages) will be limited to repair or replacement of the product manufactured by Hercules. The consumer's statutory rights on account of applicable law on the sale of consumer goods are not affected in any way by this warranty.

This warranty will not apply:

(1) If the product has been modified, opened, altered in any way or damaged by inappropriate or abusive use, negligence, an accident or normal wear; (2) If the product has been used or stored in abnormal conditions (e.g. exposition to adverse weather conditions, to direct sunlight, to water or to sand); (3) For any other reason not relating to a material or manufacturing defect; (4) In the event of non-observance of the instructions provided in the User Manual or by our Technical Support; (5) To any software not edited by Guillemot, said software being covered by a specific warranty granted by the software's editor; (6) If the warranty seals have been removed or altered in any way; (7) For damages to or the loss of programs, data or storage media, or for the costs arising from the retrieval of said data; (8) For damages to or the loss of programs or personal data occurring after repair or replacement of the product; (9) For damages caused by the installation of third-party software or by computer viruses.

Guillemot shall in no event be held responsible for any damage to or loss of personal data, programs, software or removable storage media. Before returning this program to Technical Support, please create a backup of any personal and/or sensitive data. Guillemot shall in no event be held responsible for reinstalling or retrieving personal data or programs other than those installed at the time of the product's commercialisation.

The warranty applies to your product's display if the display features at least 5 defective pixels (i.e. bright spots or dark spots, a bright spot being a white pixel permanently displayed on the screen, and a dark spot being a pixel that does not display on the screen.)

In the event where the product is returned to our Technical Support and the warranty cannot be applied owing to the presence of one or several of the exclusion conditions stated above, the incurred shipping and processing costs will be charged to the consumer.

Registered trademarks

Hercules® and eCAFÉ™ are registered trademarks of Guillemot Corporation S.A. Mandriva® is a registered trademark of Mandriva S.A.. Mozilla® is a registered trademark of Mozilla Foundation. RealNetworks® and RealPlayer® are registered trademarks of RealNetworks Inc. Fluendo is a registered trademark of Fluendo S.A. Corel® is a registered trademark of Corel Corporation. OpenOffice.org® is a registered trademark of Sun Microsystems Inc. Windows®, Windows XP®, Windows Vista® and the Windows logo are trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries of the world. AMD® and Geode® are registered trademarks of Advanced Micro Devices Inc. WiFi Certified & WiFi Protected Setup are registered trademarks or brands of the WiFi Alliance. All other registered trademarks and brand names are hereby acknowledged and are the property of their respective owners. Illustrations not binding. Contents, designs and specifications are liable to change without prior notice and may vary according to countries.

Made in China

Statement of Compliance with EU Regulations

Guillemot Corporation S.A. hereby declares that the device *UMPC EC-800-H20G/S* complies with the with the main requirements and other relevant clauses of Directive RTTE 1999/5/CE, of Directive CEM 2004/108/CE and with the standards relating to electrical security (IEC 60950, 2001 Edition / EN 60950-1, 2001 Edition / NF EN 60950, Amendment A11-2004). The compliance statement can be viewed on the following website:

ftp://ftp.hercules.com/EC-800/H20G-AL8/DoC-eng_UMPC_EC-800-H20G.pdf



Copyright

© 2008 Guillemot Corporation S.A. All rights reserved.

No part of this manual may be copied, summarised, issued, posted, stored in a search engine or translated in any language or computer language, for any purpose or by any means that may be, whether electronic, mechanical, magnetic, manual, by means of photocopies, recordings or others, without the express authorisation in writing of Guillemot Corporation S.A.

End User License Agreement

IMPORTANT: Please read the following End User License Agreement before using the eCAFÉ™ device. The term "Software" refers to all executable programs, managers, libraries, data files and to any documentation relating to the programs, as well as the complete operating system included in the eCAFÉ™ product. The Software is licensed, and not sold, to the User, exclusively for use complying with the terms of this License Agreement. The Software is comprised of free software sub-applications provided by the Free Software Foundation (applications, product administration programs, etc.), which are sub-licensed by Guillemot Corporation S.A. under the conditions described in point 5 above. You hereby accept and agree to abide by the Terms & Conditions of this License Agreement. If you disagree with the Terms & Conditions of this License Agreement, please do not use the Software.

The Software is protected by international copyright laws and agreements, as well as other international laws and agreements relating to intellectual property.

The Software (excluding the software sub-applications) remains the property of Guillemot Corporation S.A. All rights reserved. Guillemot Corporation S.A. grants only a limited and non-exclusive right to use the Software.

Guillemot Corporation S.A. reserves the right to cancel this License Agreement in the event of failure to abide by its Terms & Conditions.

License granted:

1. The license is granted to the original Buyer alone. Guillemot Corporation S.A. remains the sole owner and holder of the Software (excluding the software sub-applications), and reserves all rights that are not expressly granted by this License Agreement. The User is not allowed to sub-license the rights granted by this License Agreement. The User is allowed to transfer this License, provided that the original Buyer retains no part of the Software and that the Transferee reads and accepts the Terms & Conditions of this License Agreement.
2. The Buyer may only use the software on one computer at a time. The machine-readable part of the Software may be copied to another computer, provided that the Software is deleted from the first computer and that it is impossible to use the Software on several computers at the same time.
3. The Buyer hereby acknowledges and accepts the copyright belonging to Guillemot Corporation S.A. The copyright shall in no event be removed from the Software, nor from any documentation, whether printed or electronic, provided with the Software.
4. The License grants the User the right to perform one (1) copy of the machine-readable part of the Software for archival purposes, provided that the User also copies Software's copyright.
5. The free software sub-applications provided by the Free Software Foundation and sublicensed by Guillemot Corporation S.A. are subject to the Terms & Conditions of the General Public License (GPL), which is available at the following address: <http://fsf.org/gpl/gpl-fr.html>. The source codes of these software sub-applications are available at the following address: <http://www.hercules.com/fr>. Some of these software sub-applications have been modified by Guillemot Corporation S.A. (the list of these software sub-applications is available on the following website: <http://www.hercules.com/fr>). <http://www.hercules.com/fr>.
6. Except within the limits expressly allowed by this License Agreement, the Buyer may not agree or allow any third party to agree to: grant a sublicense; provide or divulge the Software to other third parties; allow use of the Software on several computers at a time; perform alterations or copies of any kind; reverse engineer, decompile or modify the Software in any way or attempt to obtain information relating to the Software that is not accessible to the User; perform copies or translations of the User Manual.

Warranty limitation:

The Software is provided "as is", with no guarantee whatsoever from Guillemot Corporation S.A. regarding its use and/or performance. Guillemot Corporation S.A. does not guarantee that the operation of the Software will be free from interruptions or errors. The use or the performance of the Software remain under the Buyer's entire responsibility, and Guillemot Corporation S.A. can provide no guarantee of any kind with regard to the performance and results obtained by the Buyer while using the Software. No guarantee of any kind, whether explicit or implied, is offered by Guillemot Corporation S.A. with regard to the non-violation of third party rights, the merchantability or the adequacy of the Software to a specific use.

In no event shall Guillemot Corporation S.A.'s liability be engaged in the event of damages of any kind arising from the use or the incapacity to use the Software.

Applicable law:

The Terms & Conditions of this License Agreement are subject to French Law.

ENVIRONMENTAL CARE RECOMMENDATIONS



At the end of its useful life, this product should not be discarded with standard household refuse but should be given to a collection point for waste from electric and electronic devices, where it shall be recycled.

This is stated by the symbol that appears on the product, the User Manual or the packaging.

According to their specificities, these materials may be recycled. By supporting recycling and other methods of recovering waste from electric and electronic equipment, you help care for the environment.

Please consult with the local authorities, who will refer you to the relevant waste collection point.