

Configuring Traktor Pro 2 for the DJ Control MP3 (Windows version)

(Updated: October 2014 for version 2.68)

1- Audio configuration in Traktor

As the DJ Control MP3 is only a MIDI controller, you will need to configure Traktor audio setup window in order to use your sound card for playback and monitoring on separate stereo channels (Consult the user manual for more details).

2- Configuration of the Midi controllers in Traktor Pro 2 (Version 2.68)

a. At the bottom of the configuration menu, click the **Import** button to locate and select the **.TSI** configuration file.




b. **Controller Mapping, MIDI Device Setup** and **Effects Settings** should be selected before clicking OK



c. In **Controller-Manager**:

- For Device, select **Generic MIDI-DJ Control MP3**

- Do the same for **In-Port**

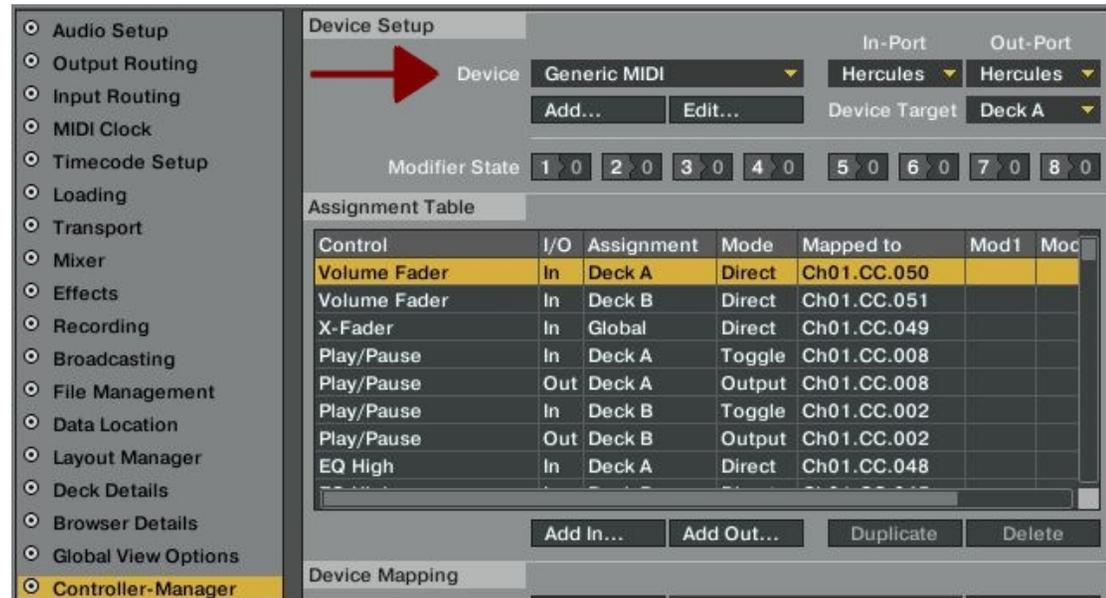

NOTE: Since there is no MIDI OUT port available, the LEDs of the DJ Control MP3 cannot be used by Traktor.

This menu also give you access to the various MIDI settings, should you wish to modify them. (Consult chapter **13.21 – Controller Manager** of the user manual for more details).



MIDI Layout for the DJ Control MP3 and Traktor Pro 2

NOTE: The terms used are those employed in Traktor

Main Configuration:

- A-** EQ (Bass/ Mid/ Treble)
- B-** Deck Tempo
- C-** **Secondary Functions (See below)**
- D-** Loop Size + Set
- E-** Deck Monitor Cue
- F-** Deck Volume
- G-** Deck Time Stretch ON
- H-** Browser List Select Up/Down
- I-** Deck Pitch Bend
- J-** Deck Load Selected
- K-** Seek Position (Fine)
- L-** Deck Seek Position
- M-** Deck Tempo - Sync
- N-** Deck Cue/Pause
- O-** Deck Play/Pause
- P-** X-Fader



Secondary functions:

- Press button **1** to enable the deck's effect unit.

- Press and hold the button **2** to control

a) The deck's gain using the **Pitch** Knobs

b) Monitor mix (Left Jog Wheel)

c) Monitor Volume (Right Jog Wheel)



- Press and hold the button **3** to enable the Scratch function on the jog wheel.



Midi controllers map

