


Configuring Traktor Pro 2 for the DJ 4Set (Windows version)

(Updated: October 2014 for version 2.68)


1- Configuration of the ASIO driver/ MIDI channel

- From the DJ Console control panel, set the **Audio Mode** to **ASIO**
- Click the **ASIO** tab and configure the various driver settings to be used by Traktor.

NOTE: These settings cannot be modified once Traktor has been launched.

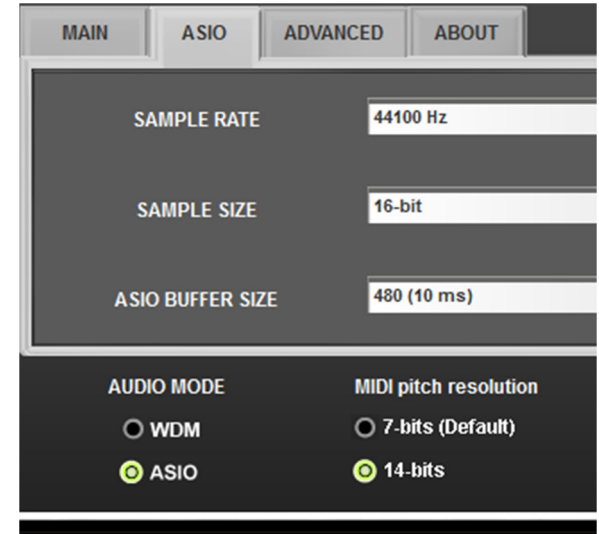


- Next, go to the **ADVANCED** tab, and make sure that MIDI channel is set to **1-2 (Defaults)**.

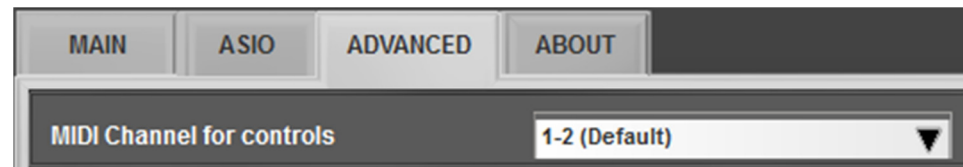

This is very important as the profile provided is configured for the DJ Console 4Set to work on these channels.

If you have multiple MIDI controllers, or would like to use the DJ Console on a different MIDI channel, you will need to modify the profile accordingly. Consult Traktor's user manual for more details.

While you are there, also set the **MIDI Pitch Resolution** to **14-Bits**.

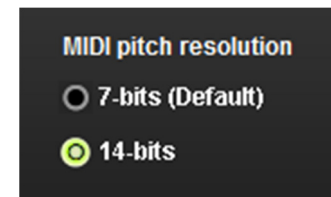

2- Audio configuration in Traktor


a) From the main menu, select **File > PREFERENCES**, and select **AUDIO SETUP**.

Choose **Hercules DJ 4Set ASIO** as **Audio Device**. Notice that the **SAMPLE RATE** and **AUDIO LATENCY** should reflect the configuration previously made in the Control panel.



b) Under **Output Routing**,

- For **Mixing Mode**, select **Internal**.
- Set **Output 3 & 4** for **Monitor** and **Output 1 & 2** for **Master**.

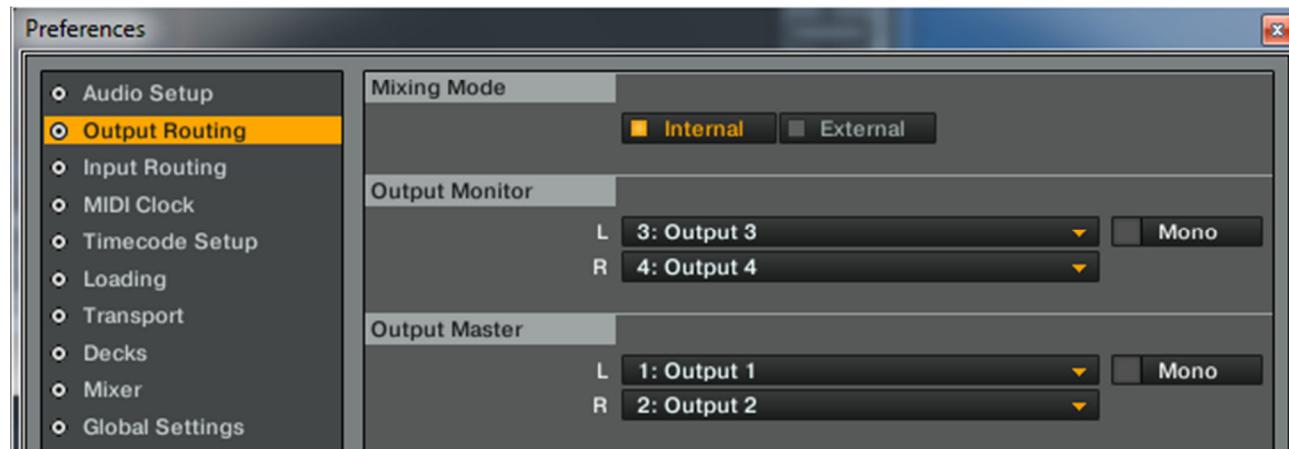

3- Configuration of the Midi controllers in Traktor Pro 2 (Version 2.68)

a) At the bottom of the configuration menu, click the **Import** button to locate and select the **.TSI** configuration file.



b) A menu will then display the different categories that will be imported



c) In **Controller-Manager**:

-For **Device**, select **DJ 4Set MIDI Generic MIDI**

- Do the same for both **In-Port** and **Out-Port**.

This menu also give you access to the various MIDI settings, should you wish to modify them (Consult chapter **13.21 – Controller Manager** of the user manual for more details).



MIDI Layout for the DJ4Set and Traktor Pro 2


NOTE: The terms used are those employed in Traktor (unless indicated *).

Main Configuration:


- A-** *Mic Talkover**
- B-** EQ (Bass/Mid/Treble)
- C-** Master Volume
- D-** Tempo Bend (Down/Up)
- E-** Tempo
- F-** Sync
- G-** Seek position (Backward/Forward)
- H-** Monitor Cue
- I-** Volume Fader
- J-** Jog Turn
- K-** Jog Scratch
- L-** Scratch On/Off (*All Decks*)
- M-** Audio Recorder On/Off
- N-** Cue
- O-** Play/Pause
- P-** X-Fader



- Q-** Monitor Mix
- R-** *Headphone volume**

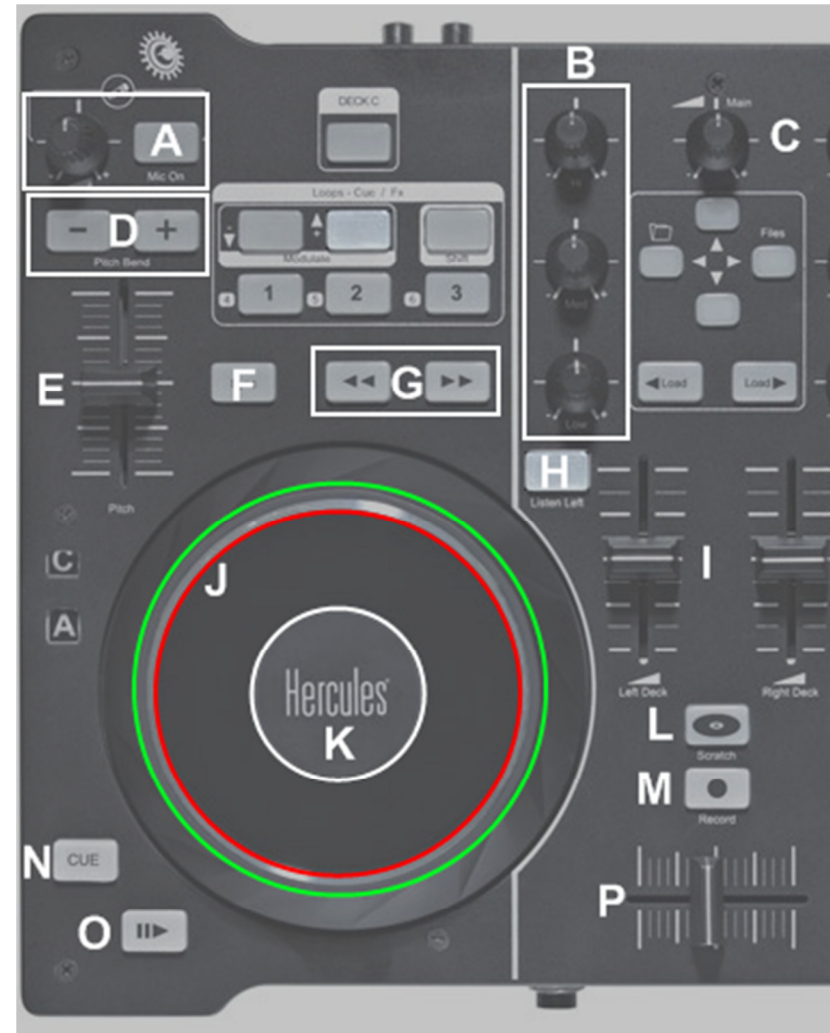

Navigation/ browser:

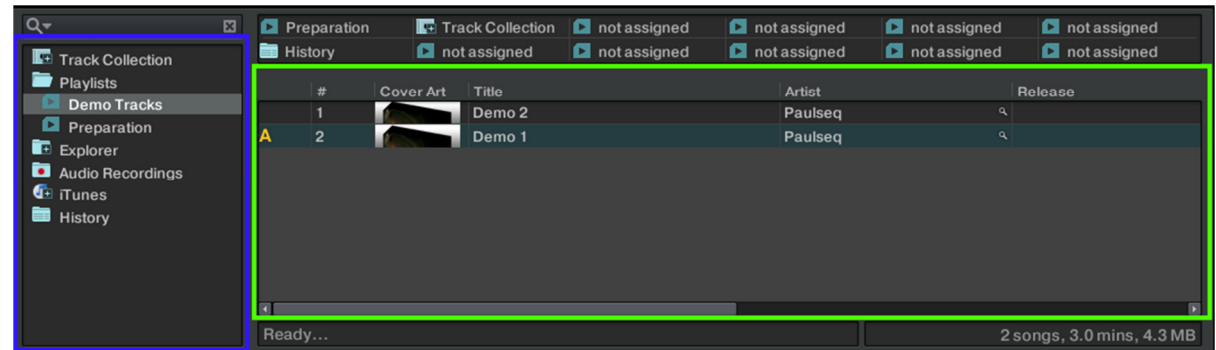

Folder navigation

- **Folder:** Open Browser toggle
- **Folder** + $\uparrow \downarrow$: Step browsing
- **Folder** + **Load** On Left Deck: Expand/Collapse




- **Folder** +  : Fast browsing



Playlist navigation (Default)

- $\uparrow \downarrow$: Step browsing
- **Files:** Open Browser toggle



- **Files** +  : Fast browsing
- **LOAD:** Load Selected



Loops


- **1**: Loop Set (In/Out)
- **Modulate +**: Loop Size (+)
- **Modulate -**: Loop Size (-)



Hotcues

- **2**: Select / Set+Store Hotcue 1
- **3**: Select / Set+Store Hotcue 2


FX (Group)

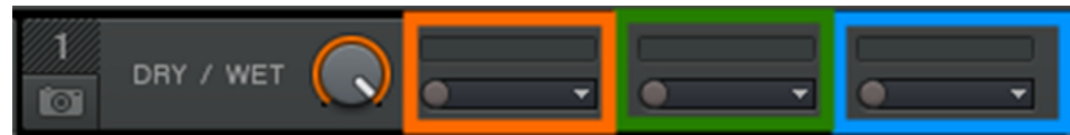

- ☐ Effect 1 On
- ☐ Effect 2 On
- ☐ Effect 3 On

+  : Effect Select

- ☐ Effect Amount
- ☐ Effect Amount
- ☐ Effect Amount

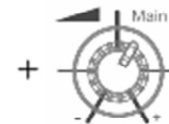

Midi Controllers/Notes map

Deck A

Deck B



Deck C

Deck D

