

Configuring Traktor Pro 2 for the DJControl AIR+ (MAC version)

(Updated: October 2014 for version 2.68)

1- Controller configuration

Open the **DJ Console control panel** , and make sure the following parameters are set correctly:

MAIN tab:

- a) **Enable proximity Sensor** is **On**
- b) **MIDI Resolution** is set to **14-bit (Default)**



ADVANCED tab:

- c) **MIDI channel** is set to **1 (Defaults)**.

If you have multiple MIDI controllers, or would like to use the DJ Console on a different MIDI channel, you will need to modify the profile accordingly.

Consult Traktor's user manual for more details.


- d) **Headphone channels** is set to **3-4 (default)**
- e) Set the pad **Velocity** for both **Sample** and **Cue** to **Off**.

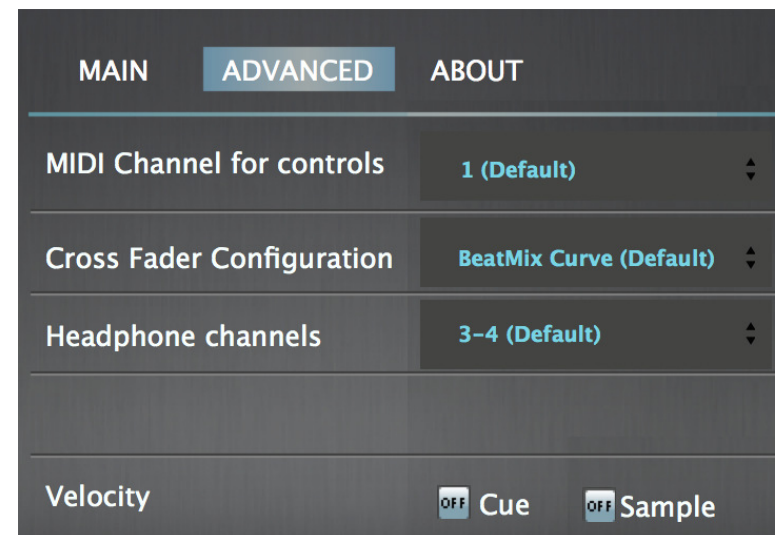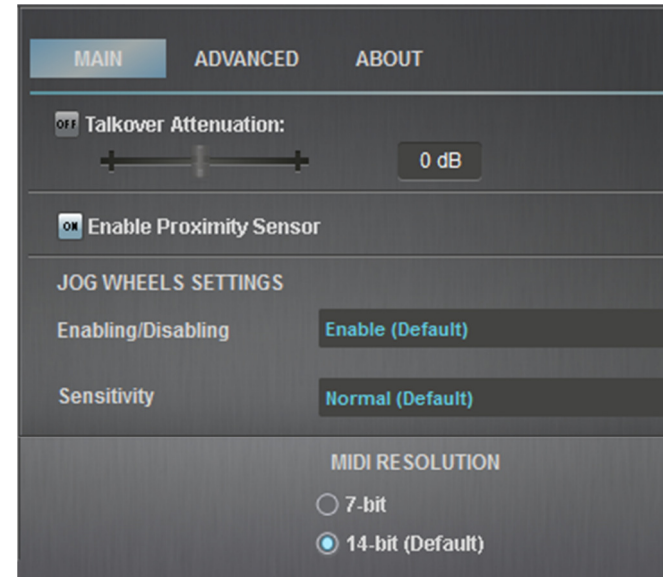

2- Audio configuration in Traktor Pro 2


a) From the main menu, select **File > PREFERENCES**, and select **AUDIO SETUP**.

Choose **DJConsole AIR+** as **Audio Device**. You can also adjust the LATENCY if needed.

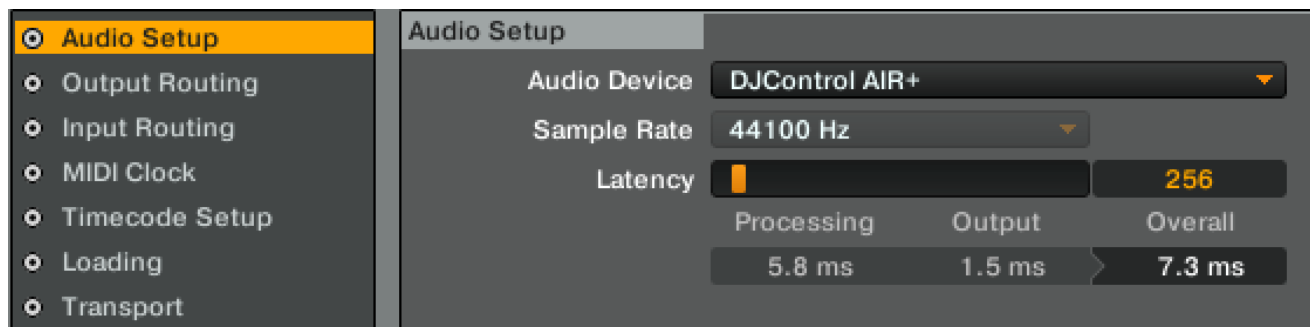

b) Under **Output Routing**,

- For **Mixing Mode**, select **Internal**.
- Set **Out 3 & 4** for **Monitor** and **Out 1 & 2** for **Master**.

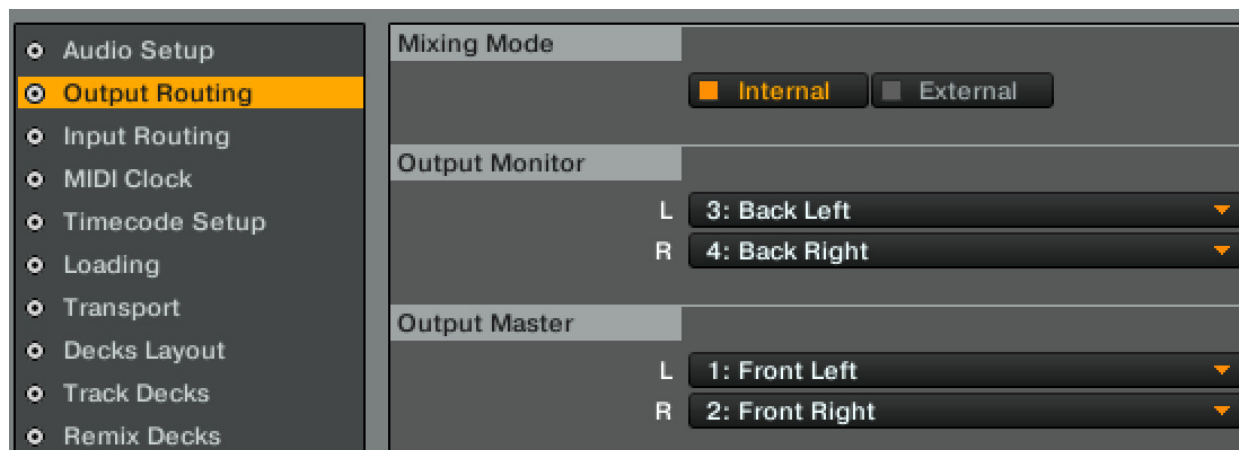

3- Configuration of the Midi controllers in Traktor Pro 2 (Version 2.68)

a) At the bottom of the configuration menu, click the **Import** button to locate and select the **.TSI** configuration file.



b) A menu will then display the different categories that will be imported.



c) In **Controller-Manager**:

- For **Device**, select **DJConsole AIR+ - Generic MIDI**
- Select **DJConsole AIR+** for both **In-Port** and **Out-Port**.



This menu also give you access to the various MIDI settings, should you wish to modify them (Consult chapter **13.21 – Controller Manager** of the user manual for more details).



MIDI Layout for the DJConsole AIR+ and Traktor Pro 2

NOTE: The terms used are those employed in Traktor (unless indicated *).

Main Configuration:

1- Tempo Adjust

2- Filter Adjust

3- Filter On/Off



: Gain Adjust (Mixer)

4- EQ (High/Mid/Bass Adjust)

5- Tempo Bend (stepless)

6- Jog Turn/Jog Touch/Scratch

7- Monitor Cue On

8- Volume Adjust

9- Scratch On (*All Decks*)

10- *Talk Over / Mic On**

11- REC

12- Cruise Mode


13- Sync On

14- Cue

15- Play/Pause (Deck Common)

SHIFT+ Play: See position (*Stop**)

16- Position

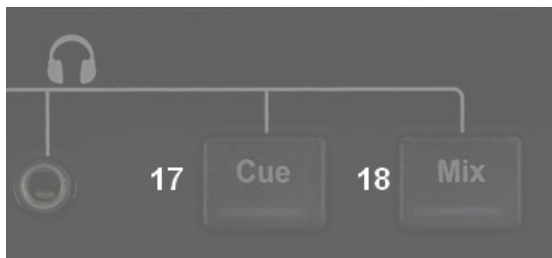


17- Monitor Mix Adjust (**Cue**)

18- Monitor Mix Adjust (**Mix**)




Navigation/ browser:

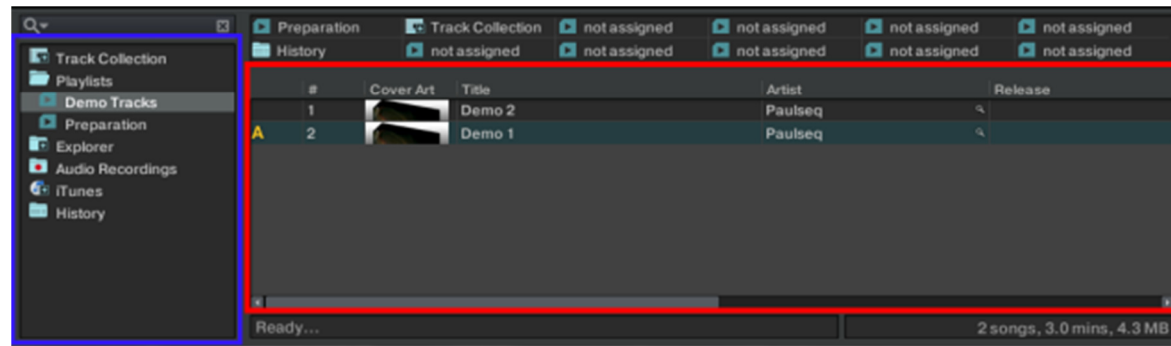


Push down the **Browser** knob to switch between **Folders** and **Files**:

Folders

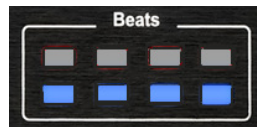

Files

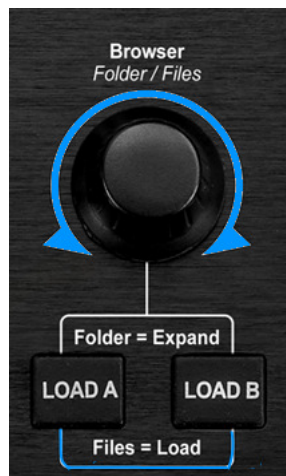


- Select Up/Down (Browser.tree)
- Load A: Expand/Collapse
- Load B: Open Browser toggle




- Select Up/Down (Browser.List)
- Load Selected (Deck A & B)



Effect = 

 +  : Dry/Wet Group

- **1**: Effect 1 On/Off
- **2**: Effect 2 On/Off
- **3**: Effect 3 On/Off

 +  : Effect 1/2/3 amount

- **4**: FX Unit 1 On/Off (**Deck A**) / FX Unit 2 On/Off (**Deck B**)




Loops = 


- **1**: Loop Set (In/Out)
- **2**: Loop Size Select (-1/2 Beats)
- **3**: Loop Size Select (+1/2 Beats)
- **4**: Flux mode On



Hot Cue

- **1**: Select / Set+Store Hotcue 1
- **2**: Select / Set+Store Hotcue 2
- **3**: Select / Set+Store Hotcue 3
- **4**: Select / Set+Store Hotcue 4

-  + **1/2/3/4**: Delete Hotcue


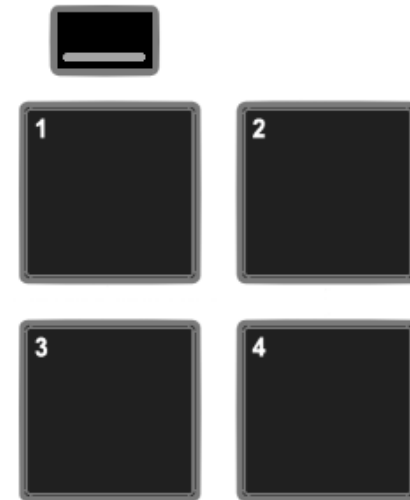


Sample


- **1**: Slot 1 Capture/Trigger/Mute
- **2**: Slot 2 Capture/Trigger/Mute
- **3**: Slot 3 Capture/Trigger/Mute
- **4**: Slot 4 Capture/Trigger/Mute

-  + **1/2/3/4**: Slot Stop/Delete/Load from List


-  +  : Sync On (Deck C & D)

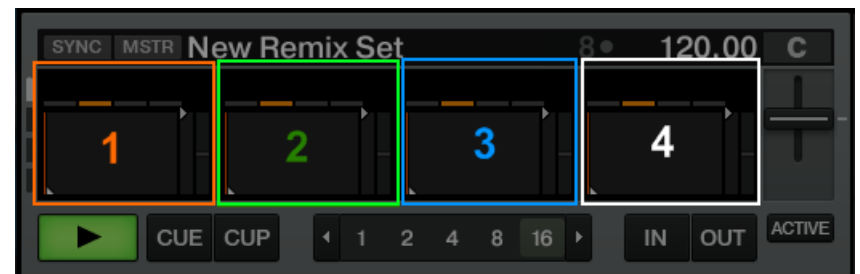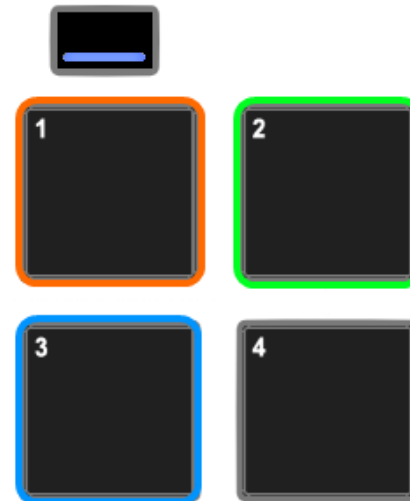


Midi Controllers/Notes map

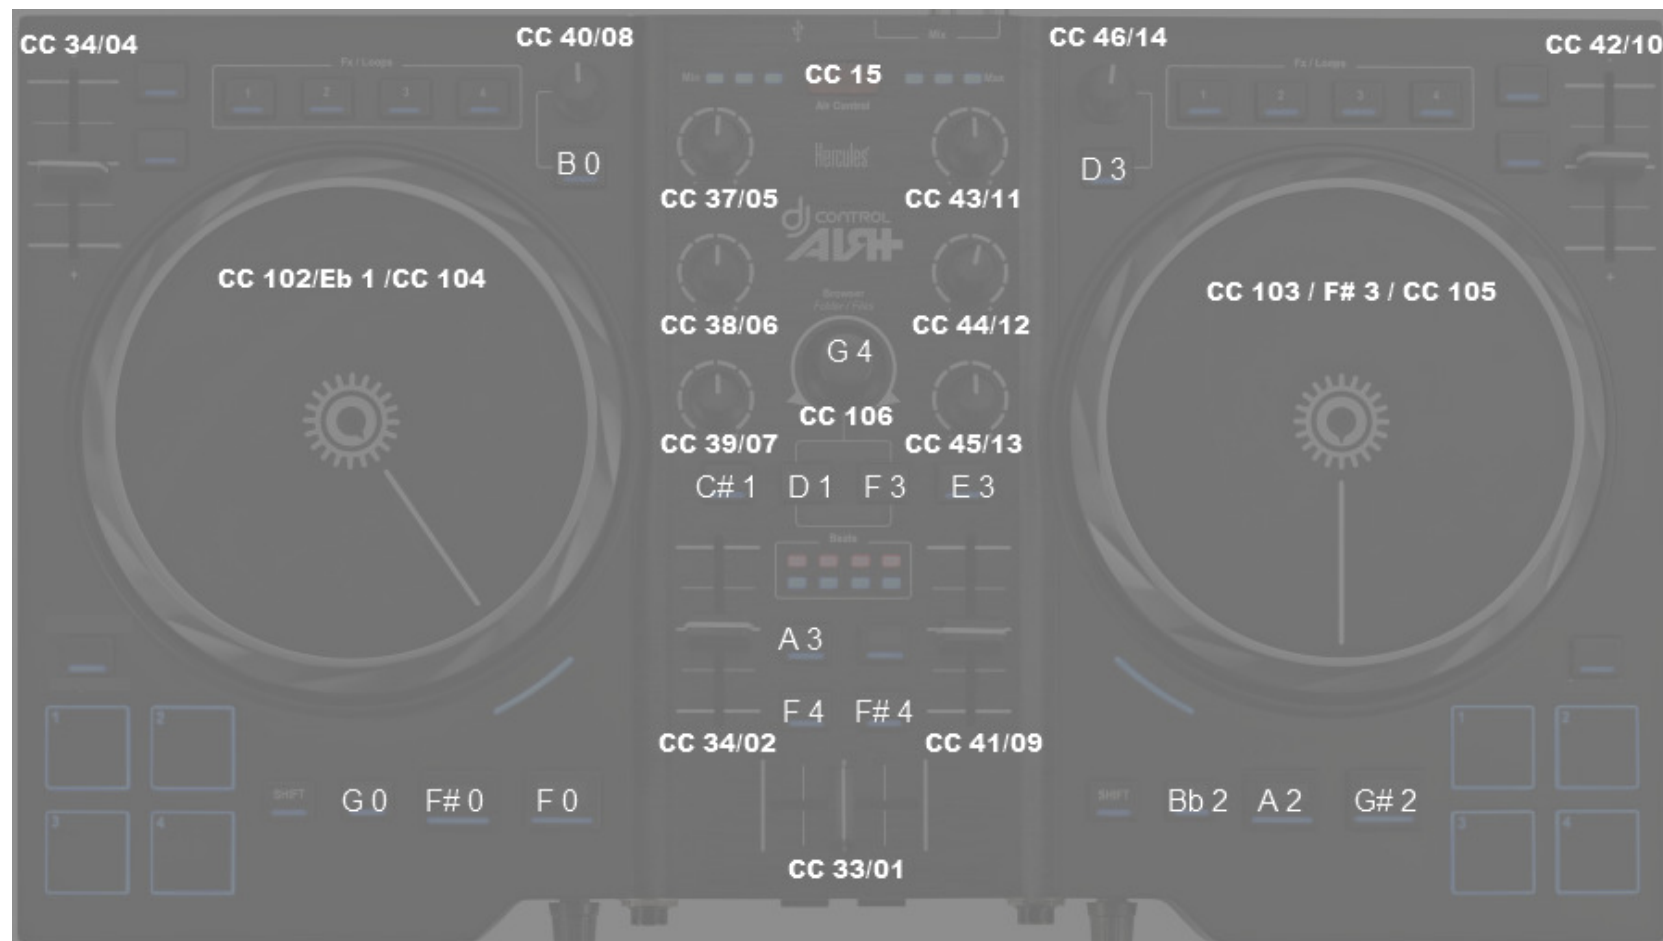


Deck A
Deck B

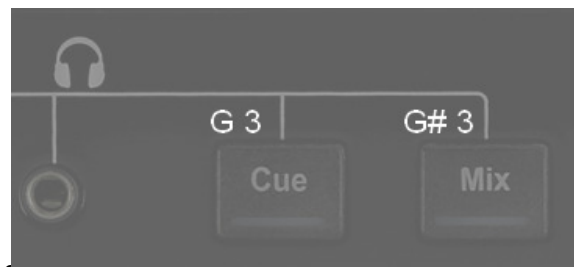

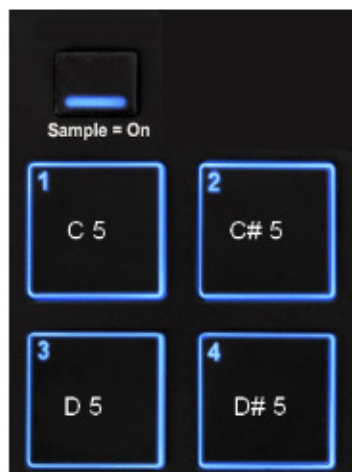

Deck A Mode

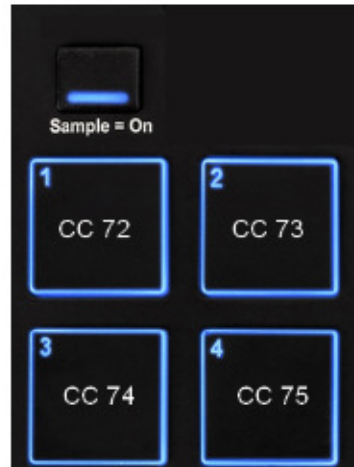

Deck B Mode

