

# Configuring Traktor Pro/Duo for the DJ Control MP3 (OS X version)

## 1- Audio configuration in Traktor

As the DJ Control MP3 is only a MIDI controller, you will need to configure Traktor audio setup window in order to use your sound card for playback and monitoring on separate stereo channels (Consult the user manual for more details).

## 2- Configuration of the Midi controllers in Traktor Pro (Version 1.27)

a. At the bottom of the configuration menu, click the **Import** button to locate and select the **.TSI** configuration file.



b. **Controller Mapping, MIDI Device Setup** and **Effects Settings** should be selected before clicking OK



c. In **Controller-Manager**:

- For Device, select **Generic MIDI-DJ Control MP3**

- Do the same for both **In-Port** and **Out-Port**

This menu also give you access to the various MIDI settings, should you wish to modify them.



## **MIDI Layout for the DJ Control MP3 and Traktor Pro/Duo**

**NOTE:** The terms used are those employed in Traktor

### Main Configuration:

- A-** EQ (Bass/ Mid/ Treble)
- B-** Deck Tempo
- C-** FX/Cue/Loop buttons/ **Secondary Function (See below)**
- D-** Toggle FX/Cue/Loop mode
- E-** Deck Monitor Cue
- F-** Deck Volume
- G-** Deck Time Stretch ON
- H-** Browser List Select Up/Down
- I-** Deck Pitch Bend
- J-** Deck Load Selected
- K-** Deck load Previous / Next
- L-** Deck Seek Position
- M-** Deck Tempo - Sync
- N-** Deck Cue/Pause
- O-** Deck Play/Pause
- P-** X-Fader



## Secondary functions:



- Press and hold the button **2** to control the deck's gain using the Pitch Knobs (A & B)



- Press and hold the button **3** to enable the Scratch function on the jog wheel.





### **FX mode:**

- 1-** Effect 1 On
- 2-** Effect 2 On
- 3-** Effect 3 On



### **Cue mode:**

- 1-** Select/ Set+Store Hotcue 1
- 2-** Select/ Set+Store Hotcue 2
- 3-** Select/ Set+Store Hotcue 3



### **Loop mode:**

- 1-** Loop Size 1/2
- 2-** Loop Size 2
- 3-** Loop Size 4



## Midi controllers map

