


Configuring Traktor Pro/Duo for the DJ Console (OS X version)


1- Audio configuration in Traktor

- a) From the main menu, click on **PREFERENCES**, and select **AUDIO SETUP**. Choose **Hercules DJ Console** as **Audio Device**. You can also adjust the **AUDIO LATENCY**.

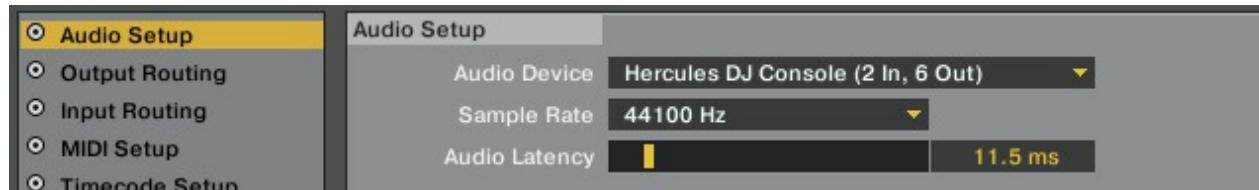


- c) Under **Output Routing**, set Output 3 & 4 for **Monitor** and Output 1 & 2 for **Master**

OS X Snow Leopard (10.6)

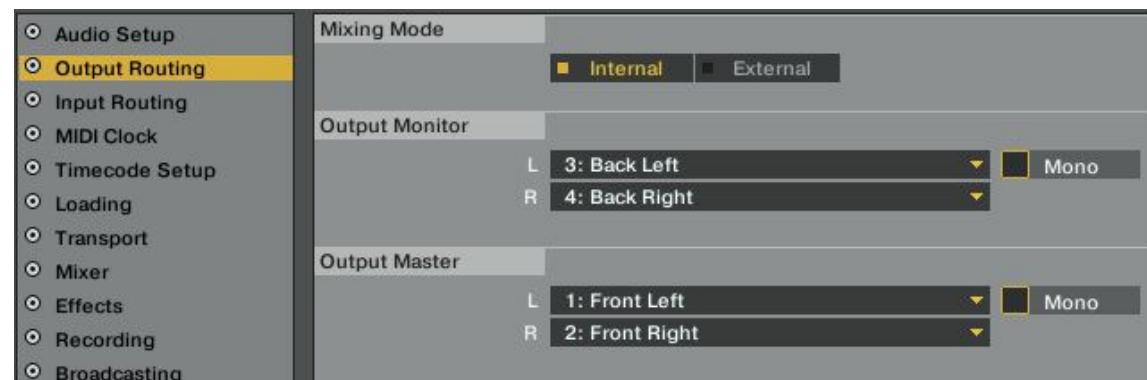

OS X Tiger (10.4) / Leopard (10.5)

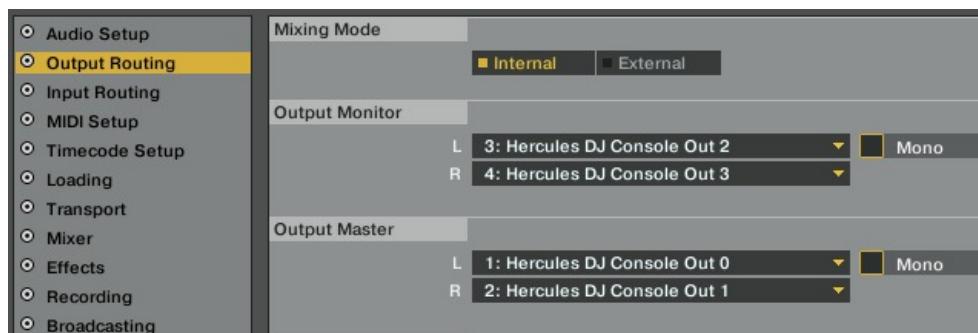

2- Configuration of the Midi controllers in Traktor Pro (Version 1.27)

- a. At the bottom of the configuration menu, click the **Import** button to locate and select the **.TSI** configuration file.



- b. **Controller Mapping**, **MIDI Device Setup** and **Effects Settings** should be selected before clicking OK

Two screenshots of the Traktor Pro interface. On the left, the 'Controller Manager' window shows a list of options with 'Controller-Manager' highlighted. A red arrow points from this window to the 'Device Setup' window on the right. The 'Device Setup' window shows the 'Device' dropdown set to 'Generic MIDI'. The 'Assignment Table' section lists various MIDI controls and their assignments to Deck A and Deck B. The table includes rows for Volume Fader, X-Fader, Play/Pause, EQ High, etc., with columns for Control, I/O, Assignment, Mode, Mapped to, Mod1, and Mod2.

c. In **Controller-Manager**:

- For Device, select **Generic MIDI-DJ Console**
- Do the same for **In-Port** and **Out-Port**

If this is not the case, be sure to select it (Port 2).

This menu also give you access to the various MIDI settings, should you wish to modify them.



MIDI Layout for the DJ Console and Traktor Pro

NOTE: The terms used are those employed in Traktor

Main Configuration:

- A- EQ (Bass/ Mid/ Treble)
- B- Deck Tempo
- C- FX/Cue/Loop buttons/ **Secondary Function (See below)**
- D- Toggle FX/Cue/Loop mode
- E- Deck Monitor Cue
- F- Deck Volume
- G- Deck Time Stretch ON
- H- Browser List Select Up/Down
- I- Deck Pitch Bend
- J- Deck Load Selected
- K- Deck load Previous / Next
- L- Deck Seek Position
- M- Deck Tempo - Sync
- N- Deck Cue/Pause
- O- Deck Play/Pause
- P- X-Fader



Secondary functions:



- Press and hold the button **2** to control the deck's gain using the Pitch Knobs (A & B)



- Press and hold the button **3** to enable the Scratch function on the jog wheel.





FX mode:

- 1-** Effect 1 On
- 2-** Effect 2 On
- 3-** Effect 3 On



Cue mode:

- 1-** Select/ Set+Store Hotcue 1
- 2-** Select/ Set+Store Hotcue 2
- 3-** Select/ Set+Store Hotcue 3



Loop mode:

- 1-** Loop Size 1/2
- 2-** Loop Size 2
- 3-** Loop Size 4

Midi controllers map

