

Configuring Traktor Pro/Duo for the DJ Console Mk4 (OS X version)

1- Configuration of the MIDI channel

From the DJ Console control panel, go to the **ADVANCED** tab, and make sure that MIDI channel is set to **1**.



This is very important as the TSI profile provided is configured for the DJ Console Mk4 to work on this channel.


If you have multiple MIDI controllers, or would like to use the DJ Console on a different MIDI channel, you will need to modify the TSI profile accordingly. Consult Traktor's user manual for more details.




2- Audio configuration in Traktor Pro

a) From the main menu, click on **PREFERENCES**, and select **AUDIO SETUP**.

Choose **Hercules DJ Console Mk4** as **Audio Device**. You can also adjust the AUDIO LATENCY.

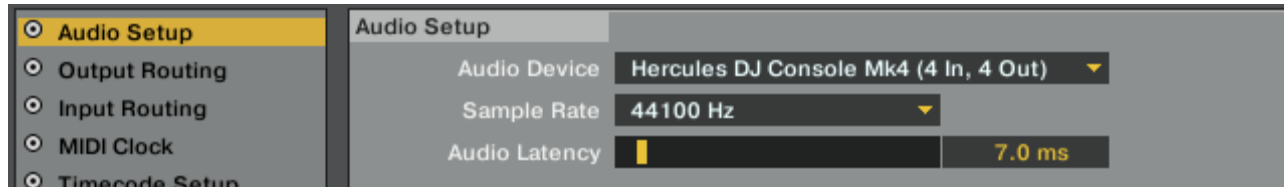


b) Under **Output Routing**, set **Output 3 & 4** for **Monitor** and **Output 1 & 2** for **Master**.

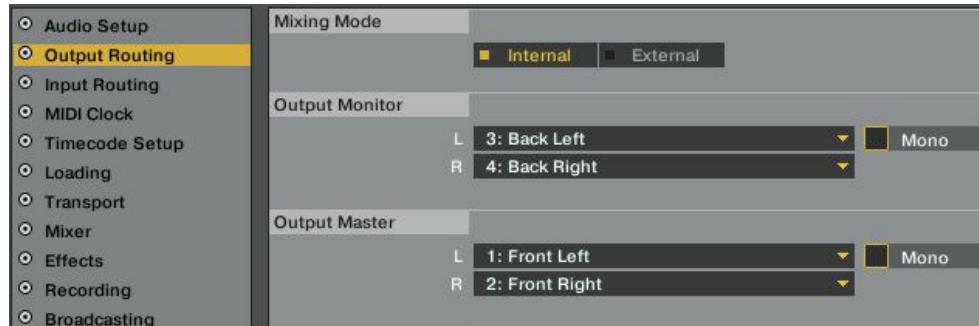

OS X Snow Leopard (10.6)

OS X Tiger (10.4) / Leopard (10.5)

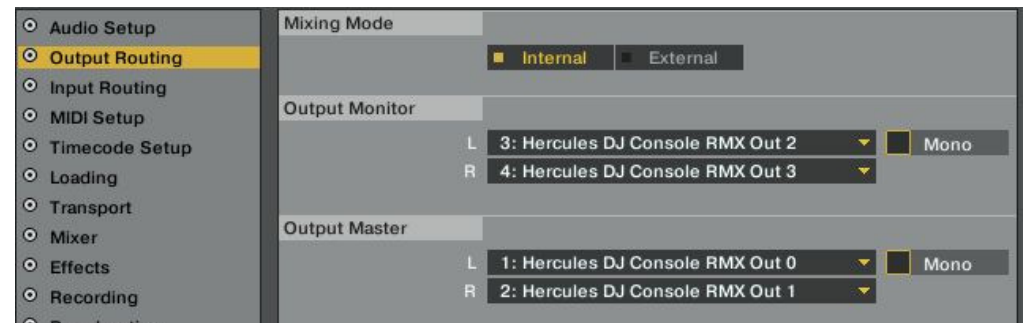

c) If you are using external sources, for **Input Routing**, select the DJ Console inputs for channels A&B.




OS X Snow Leopard (10.6)

OS X Tiger (10.4) / Leopard (10.5)



Don't forget to select the appropriate source Input type in the **DJ Console control panel**.

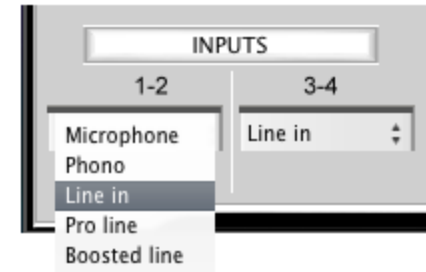

Using the **Source** buttons on **Deck A&B** will allow Traktor to switch between Internal and External playback



3- Configuration of the Midi controllers in Traktor Pro/Duo (Version 1.27)

a. At the bottom of the configuration menu, click the **Import** button to locate and select the **.TSI** configuration file.



b. **Controller Mapping** and **Effects Settings** should be selected before clicking OK

c. In **Controller-Manager**:

-For Device, select **Generic MIDI-DJ Console Mk4**

- Do the same for both **In-Port** and **Out-Port**.



This menu also give you access to the various MIDI settings, should you wish to modify them.



MIDI Layout for the DJ Console Mk4 and Traktor Pro/Duo


NOTE: The terms used are those employed in Traktor

Main Configuration:

- A-** Deck Input Select
- B-** Tempo
- C-** Tempo Bend (Down/Up)
- D-** Sync
- E-** Seek position (Backward/Forward)
- F-** EQ (Bass/ Mid/ Treble)
- G-** Scratch On/Off
- H-** Monitor Cue
- I-** Load Selected
- J-** Jog Scratch + Tempo bend
- K-** Volume Fader
- L-** Cue
- M-** Play/Pause
- N-** X-Fader
- O-** Monitor Mix



Navigation/ browser:

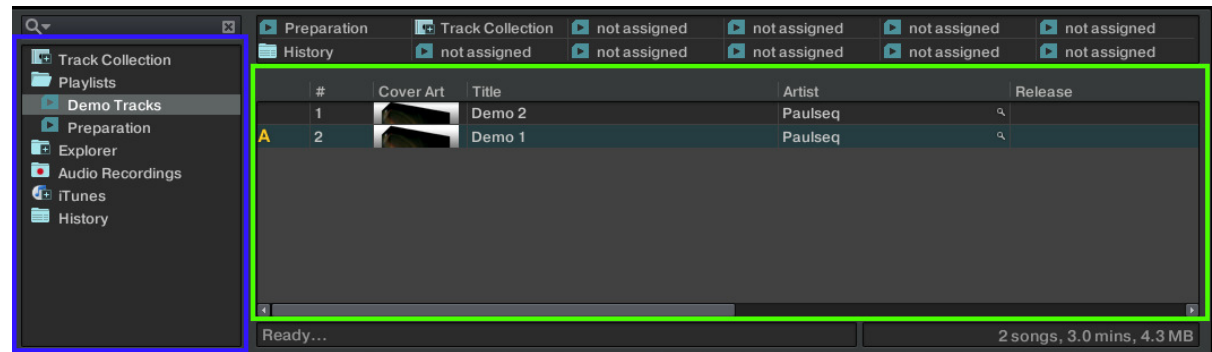

Folder navigation

Folder + ↑ ↓ : Step browsing


Folder (A) + Left Jog Wheel:
Fast browsing

Folder (A) + LOAD A:
Expand/Collapse

Playlist navigation (Default)

↑ ↓ : Step browsing

File (B) + Right Jog Wheel:
Fast browsing

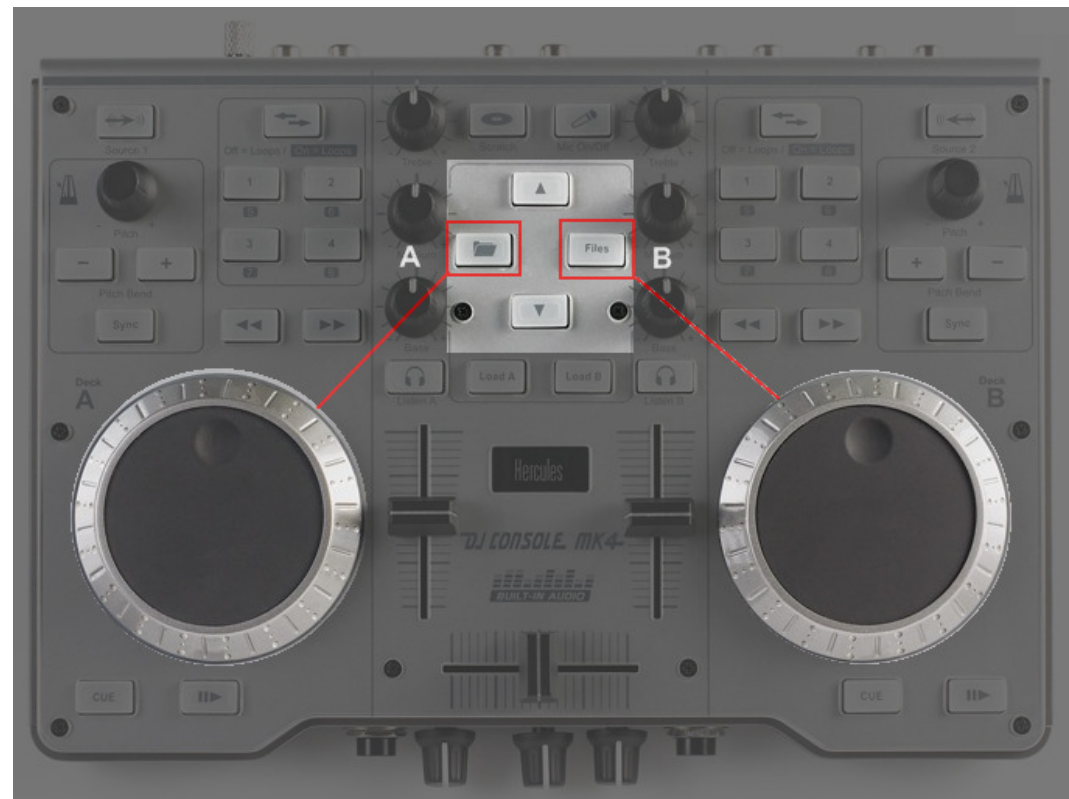

Loops / FX (Group):

- 1- Loop Set (In/Out)
- 2- Filter (Press and hold) + deck's **PITCH** knob
- 3-: Loop Size (-)
- 4-: Loop Size (+)



5- Effect 1 On


6- Effect 2 On

7- Effect 3 On

8- Effect unit 1 On (Deck A) / Effect unit 2 On (Deck B)



Midi controllers map

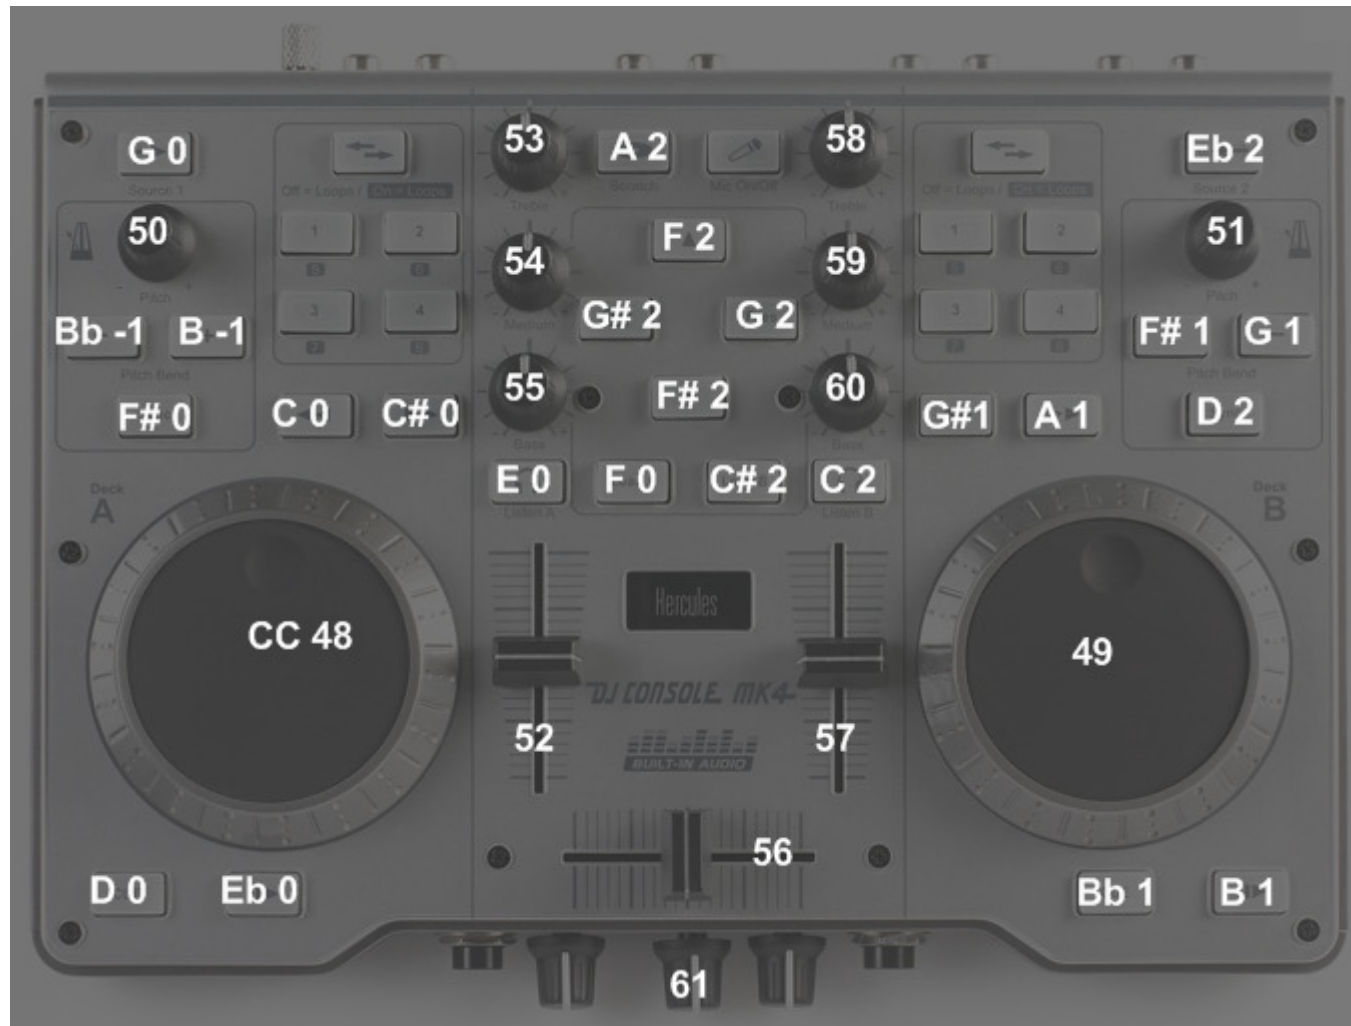

Deck A



Deck B

