

### PACKAGE CONTENTS

5 independent satellite speakers  
 1 subwoofer  
 Audio connection cable with male stereo minijack connectors  
 1 wired remote control  
 User Manual

### TECHNICAL SPECIFICATIONS

<b>Power output</b>	<ul style="list-style-type: none"> <li>▪ Subwoofer: 7 watts RMS</li> <li>▪ Satellite speakers: 5x3 watts RMS</li> </ul>
<b>Total output</b>	22 watts RMS
<b>Frequency response</b>	<ul style="list-style-type: none"> <li>▪ Subwoofer: 30 – 320Hz</li> <li>▪ Satellite speakers: 120 – 20,000Hz</li> </ul>
<b>Power Supply</b>	<ul style="list-style-type: none"> <li>▪ ~230V 50Hz</li> </ul>
<b>Magnetic shielding</b>	Yes, on the entire speaker system
<b>Features</b>	<ul style="list-style-type: none"> <li>▪ Subwoofer:                             <ul style="list-style-type: none"> <li>- Wooden case</li> <li>- Built-in amplifier (for the subwoofer and the satellite speakers)</li> <li>- Integrated power supply</li> <li>- Bass Reflex output</li> </ul> </li> <li>▪ Satellite speakers:                             <ul style="list-style-type: none"> <li>- 5 independent satellite speakers</li> <li>- Cloth cover</li> <li>- Wall mounting compatible</li> </ul> </li> </ul>
<b>Connections and cables</b>	<ul style="list-style-type: none"> <li>▪ Subwoofer:                             <ul style="list-style-type: none"> <li>- 5 color female stereo RCA audio outputs for connecting the satellites to the subwoofer</li> <li>- power cable (1.35m)</li> </ul> </li> <li>▪ Satellite speakers:                             <ul style="list-style-type: none"> <li>- speaker cables (3 x 1.60m, 2 x 4.30m)</li> <li>- Audio connection cable with male stereo minijack connectors for connecting the speaker system to an audio source (1.40m)</li> </ul> </li> </ul>
<b>For use with</b>	PC, Mac, DVDs, gaming consoles

ENGLISH

FRANÇAIS

DEUTSCH

NETERLANDS

ITALIANO

ESPAÑOL

Русский

# XPS 5.1 40

---

## RECOMMENDED USE

- Place the satellite speakers on a flat surface to prevent them from falling.
- This speaker kit is intended for use in a temperate environment.
- Your speaker system has been designed for interior use only.
- Under no circumstances should you attempt to connect your speaker system directly to the amplified outlets on an amplifier, as you risk damaging all of the equipment. Use a decoder to this effect.
- Do not open up your speaker system under any circumstances, as doing so risks damaging the internal components.
- Do not expose the speaker kit to drips or splashes of water.
- Never place any object filled with liquid (a glass, vase...) on the speaker kit.
- To avoid the risk of fire or electrical discharge, keep your speaker system away from:
  - rain or humidity, as well as all fluids (water, chemical products or any other liquids),
  - heat sources such as radiators, stoves or any other heat-producing appliances (including amplifiers or decoders),
  - direct sunlight.
- If you are not planning on using your speaker system again for an extended period of time, set the switch located at the back of the subwoofer to the **Off** position and/or unplug the subwoofer. In standby mode, this device's power consumption is 7W. Always hold the plug when unplugging the power cable; you should never pull on the cable itself.
- Unplug the speakers' power cord and disconnect them from your computer before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- Ensure the speaker kit's power cord plugged into an electrical outlet remains easily accessible.

## INSTALLING THE SPEAKER SYSTEM

1. Place the **front right** and **front left** speakers to the right and left of the monitor, respectively (or attach them to the wall). Position the **center/CEN** speaker on top of the monitor (or attach it to the wall). Direct these three speakers towards the listening position (that is to say, where you will be sitting).

2. Place the **rear right** and **rear left** speakers to the right and left of the listening position (or attach them to the wall) and slightly set back from the listening position (but not behind). Direct the rear speakers towards the listening position, and not towards the monitor. We also recommend that you position the rear speakers approximately one meter above the listening position or that you direct them towards the wall or the ceiling, in order to create a true spatial sound environment.

3. Place the subwoofer directly on the floor (for better diffusion of low frequencies), taking care not to block the side port up against a wall.

Note: to determine the ideal placement for your speaker system, try different positions in succession. The closer you move the speakers to the wall, the higher the level of low frequencies will be.

## CONNECTING THE SPEAKER SYSTEM TO THE SUBWOOFER

1. Connect the RCA connector on the rear right **Rear Right (RR)** speaker to the **Rear Right** plug.
2. Connect the RCA connector on the front right **Front Right (FR)** speaker to the **Front Right** plug.
3. Connect the RCA connector on the rear left **Rear Left (RL)** speaker to the **Rear Left** plug.
4. Connect the RCA connector on the front left **Front Left (FL)** speaker to the **Front Left** plug.
5. Connect the RCA connector on the center **CEN** speaker to the **Center** plug.

## CONNECTING THE SPEAKER SYSTEM TO A SOUND SOURCE

1. Switch off your computer.
2. Connect the green **FRONT** minijack connector on the connection cable to the green **Front Speakers** or **Front out** plug on your sound card.
3. Connect the blue **REAR** minijack connector on the connection cable to the black or blue **Rear out** plug on your sound card.
4. Connect the yellow **CENTER** minijack connector on the connection cable to the yellow or orange **Center/LFE** plug on your sound card.
5. Plug the power cable into an AC outlet.



For stereo-only sources, only connect the green Front connector and do not connect anything to the other inputs so that the sound is present on the 5 speakers.

## USING THE SPEAKER SYSTEM

1. Verify that the speaker system is switched off and the volume knob is at its minimum setting.
2. Switch on the audio source you wish to use (PC, television set, DVD player or game console).
3. Switch on your speaker system by pressing the **POWER** knob.
4. Adjust the volume using the volume knob on the remote control.

## ENVIRONMENTAL PROTECTION RECOMMENDATION



At the end of its working life, this product should not be disposed of with standard household waste, but rather dropped off at a collection point for the disposal of Waste Electrical and Electronic Equipment (WEEE) for recycling.

This is confirmed by the symbol found on the product, user manual or packaging. Depending on their characteristics, the materials may be recycled. Through recycling and other forms of processing Waste Electrical and Electronic Equipment, you can make a significant contribution towards helping to protect the environment. Please contact your local authorities for information on the collection point nearest you.

ENGLISH

FRANÇAIS

DEUTSCH

NEDERLANDS

ITALIANO

ESPAÑOL

Русский

# XPS 5.1 40

## TECHNICAL SUPPORT

If you encounter a problem with your product, please go to <http://ts.hercules.com> and select your language. From there you will be able to access various utilities (Frequently Asked Questions (FAQ), the latest versions of drivers and software) that may help to resolve your problem. If the problem persists, you can contact the Hercules products technical support service ("Technical Support"):

### By email:

In order to take advantage of technical support by email, you must first register online. The information you provide will help the agents to resolve your problem more quickly.

Click **Registration** on the left-hand side of the Technical Support page and follow the on-screen instructions.

If you have already registered, fill in the **Username** and **Password** fields and then click **Login**.

### By telephone:

<b>United Kingdom</b>	<b>08450800942</b> Charges at local rate	Monday to Friday from Noon to 4pm and 5pm to 10pm Saturday from 9am to Noon and 1pm to 7pm Sunday from 9am to Noon and 1pm to 4pm
<b>United States</b>	<b>1-866-889-5036</b> Free	Monday to Friday from 7am to 11am and from Noon to 5pm Saturday and Sunday from 7am to Noon (Eastern Standard Time)
<b>Canada</b>	<b>1-866-889-2181</b> Free	Monday to Friday from 7am to 11am and from Noon to 5pm Saturday and Sunday from 7am to Noon (Eastern Standard Time)
<b>Denmark</b>	<b>80887690</b> Free	Monday to Friday from 1pm to 5pm and 6pm to 11pm (English) Saturday from 9am to 1pm and 2pm to 8pm Sunday from 10am to 1pm and 2pm to 5pm
<b>Sweden</b>	<b>0200884567</b> Free	Monday to Friday from 1pm to 5pm and 6pm to 11pm (English) Saturday from 9am to 1pm and 2pm to 8pm Sunday from 10am to 1pm and 2pm to 5pm
<b>Finland</b>	<b>0800 913060</b> Free	Monday to Friday from 2pm to 6pm and 7pm to Midnight (English) Saturday from 10am to 2pm and 3pm to 9pm Sunday from 11am to 2pm and 3pm to 6pm

## WARRANTY

Worldwide, Guillemot Corporation S.A. ("Guillemot") warrants to the consumer that this Hercules product will be free from material defects and manufacturing flaws for a period of two (2) years from the original date of purchase. Should the product appear to be defective during the warranty period, immediately contact Technical Support, who will indicate the procedure to follow. If the defect is confirmed, the product must be returned to its place of purchase (or any other location indicated by Technical Support).

Within the context of this warranty, the consumer's defective product will, at Technical Support's option, be either repaired or replaced. Where authorized by applicable law, the full liability of Guillemot and its subsidiaries (including for indirect damages) is limited to the repair or replacement of the Hercules product. The consumer's legal rights with respect to legislation applicable to the sale of consumer goods are not affected by this warranty.

This warranty shall not apply: (1) if the product has been modified, opened, altered, or has suffered damage as a result of inappropriate or abusive use, negligence, an accident, normal wear, or any other cause not related to a material defect or manufacturing flaw; (2) in the event of failure to comply with the instructions provided by Technical Support; (3) to software not published by Guillemot, said software being subject to a specific warranty provided by its publisher.

### **Copyright**

© 2007 Guillemot Corporation S.A. All rights reserved.

Guillemot™ and Hercules® are trademarks and/or registered trademarks of Guillemot Corporation S.A. All other trademarks and brand names are hereby acknowledged and are property of their respective owners. Illustrations not binding. Contents, designs and specifications are subject to change without notice and may vary from one country to another.