

FAQ DJ Console 4-Mx

- 1) **DJ Console 4-Mx does not control VirtualDJ 7 LE 4-Mx, except for a few controls such as the crossfader and master volume.**

Your DJ Console 4-Mx is probably set to a MIDI channel other than Channel 1-2.

Open the DJ Console control panel, click on the ADVANCED tab, and set the MIDI channel to 1-2.



- 2) **The scratch mode does not seem to work. The scratch button is On, but the jog wheels don't produce a scratch sound in VirtualDJ.**

Check on the underside of your DJ Console 4-Mx and make sure the 2 vertical locks of the jog wheels are in Unlock position.