 
 
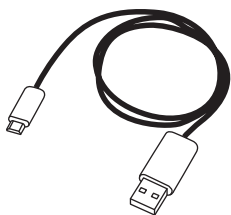 
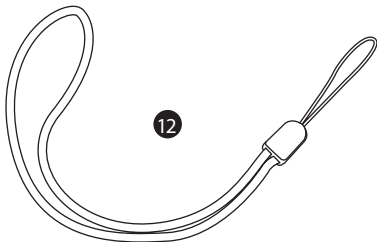 


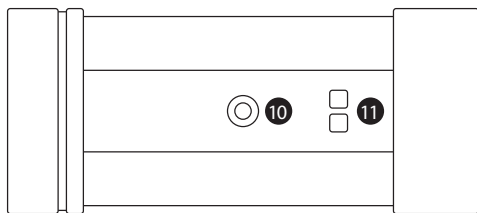

WAE Outdoor 04Plus FM

Wireless Audio Experience

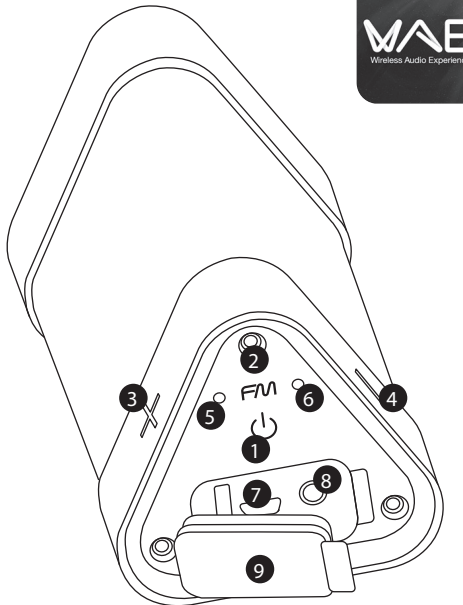

1. Charge completely before first use

Completely charge your WAE Outdoor 04Plus FM speaker before using it for the first time. Connect the Micro-USB connector on the Micro-USB to USB cable (13) to the Micro-USB port (7) on the WAE Outdoor 04Plus FM speaker, and the other end of the cable to the USB port on a computer or on a smartphone/tablet USB power adapter (5V/1A)*.

The standard charging time is 4 hours.

While charging, the charge indicator (5) flashes. When the battery is fully charged, the charge indicator (5) stops flashing.

When the battery level is low, the charge indicator (5) flashes.

2. Getting started with your speaker

To power on your WAE Outdoor 04Plus FM speaker, press the on/off button (1). To power off the speaker, press the on/off button (1) for 2 seconds.

When used for the first time, your WAE Outdoor 04Plus FM speaker is ready for pairing: the Bluetooth indicator (6) flashes blue.

- On your smartphone/tablet, MP3 player or computer, enable the Bluetooth wireless technology function, and search for available Bluetooth devices.

- Select WAE Outdoor 04Plus FM in the list of available Bluetooth devices and carry out the pairing (if an access code is required, enter 0000).

Once the devices are paired and connected, the Bluetooth indicator (6) stays lit up in blue. You are now ready to play your music.

3. Volume and music controls

The volume + and volume - buttons (3 and 4) let you control the volume of your WAE Outdoor 04Plus FM speaker, independently of the controls on your Bluetooth device (smartphone, tablet, MP3 player, computer...).

For devices supporting Absolute Volume (AVRCP 1.4) mode, their volume level is directly controlled by the WAE Outdoor 04Plus FM speaker.

The + and - buttons (3 and 4) also let you switch to the next track or the previous track, respectively, by way of a long press on the corresponding button.

Pressing both the + and - buttons (3 and 4) at the same time lets you pause a track, or resume playback of a paused track.

4. Bluetooth disconnection and new pairing

If you want to play music from a different Bluetooth music source (smartphone, tablet, MP3 player, PC...) than that currently used, press and hold the FM button (2) for 3 seconds until it beeps to disconnect the connected device. The Bluetooth indicator (6) flashes blue to indicate that you can now pair and connect a new Bluetooth device.

5. Clearing the saved list of paired devices

Your WAE Outdoor 04Plus FM speaker can save pairing information for up to 8 devices. A long press (8 seconds) on the FM button (2) lets you clear the saved list of paired devices.

6. FM mode

Press the FM Radio button (2) to enable the FM radio function: the indicator (6) lights up in green.

When used for the first time, an automatic scan is carried out: the automatic scan will save all detected stations, and will start playing the first station when the scan is complete. You can then switch between the different stations using a long press on the + (3) and - (4) - buttons.

Pressing the Play/Pause button (3+4) enables or disables the mute mode.

To launch a new scan for stations, press and hold the FM Radio button (2) for 3 seconds. During a scan, the indicator (6) flashes green. You can save up to 40 stations.

Download and check out all the FM functionalities thanks to the WAE Music app: display frequencies, stations list...

In FM mode, a short press on the FM button (2) lets you return to the Bluetooth mode.

7. Line input

You can connect your MP3 player directly to the speaker's line input connector (8).

8. Standby mode

When the WAE Outdoor 04Plus FM speaker plays no music (via the Bluetooth function or the FM radio) for 10 minutes or more, it switches to standby mode in order to save battery power. You can "wake it up" from standby mode by pressing the on/off button (1) or using the WAE Music app.

9. IP67 protection

Make sure that the protective cover is properly closed, in order to ensure that the product is water- and dust-tight.

* *Not included.*


- 1. On/off button
- 2. FM/Bluetooth® wireless technology mode
- 3. ⏪/+ / ⏩
- 4. ⏮/- / ⏭
- 3+4. ⏸/||/⏹
- 5. Battery indicator
- 6. FM/Bluetooth indicator
- 7. USB In
- 8. Line In
- 9. Protective cover
- 10. Screw thread for 1/4" mount
- 11. Wrist strap attachment hoop
- 12. Wrist strap
- 13. Micro-USB to USB cable

Download the WAE Music app



MAIN PANEL WITH WAE OUTDOOR 04PLUS FM SPEAKER CONNECTED

<p>SPEAKER OPTIONS</p>	<p>70%</p>	<p>USER MANUAL</p>
<p>Access information regarding the app version, firmware version, standby mode, etc.</p>	<p>Information regarding the WAE Outdoor 04Plus FM speaker's battery level.</p>	<p>Access the online manual.</p>
<p>MUSIC PLAYER</p>	<p>AUTO SCAN</p>	
<p>Open the music player.</p>	<p>Scan for the WAE Outdoor 04Plus FM speaker when the connection has been lost. This button is only available when the connection has been lost.</p>	
<p>SOUND SETTINGS</p>	<p>STANDBY</p>	<p>FM</p>
<p>Open the equalization panel (in <i>Bluetooth®</i> mode only).</p>	<p>Remotely turn on the WAE Outdoor 04Plus FM speaker/put it in standby mode. Standby mode affects the speaker's battery life.</p>	<p>Open the FM control panel.</p>

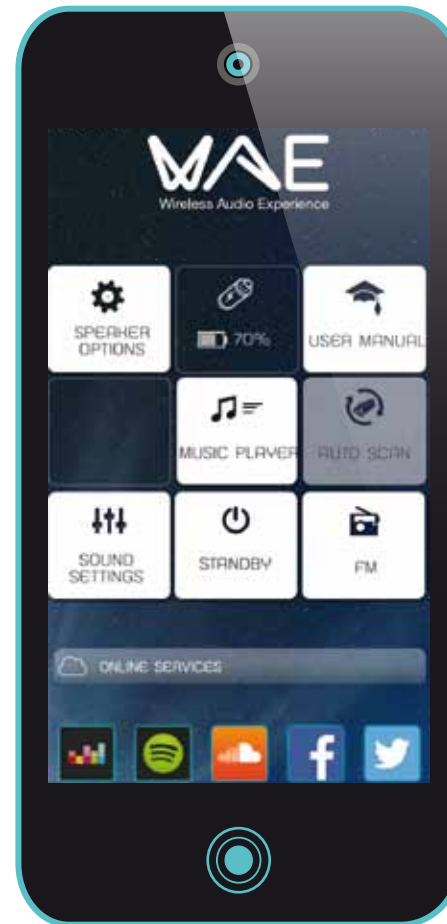 


Main panel



Main panel in standby mode

FM PANEL

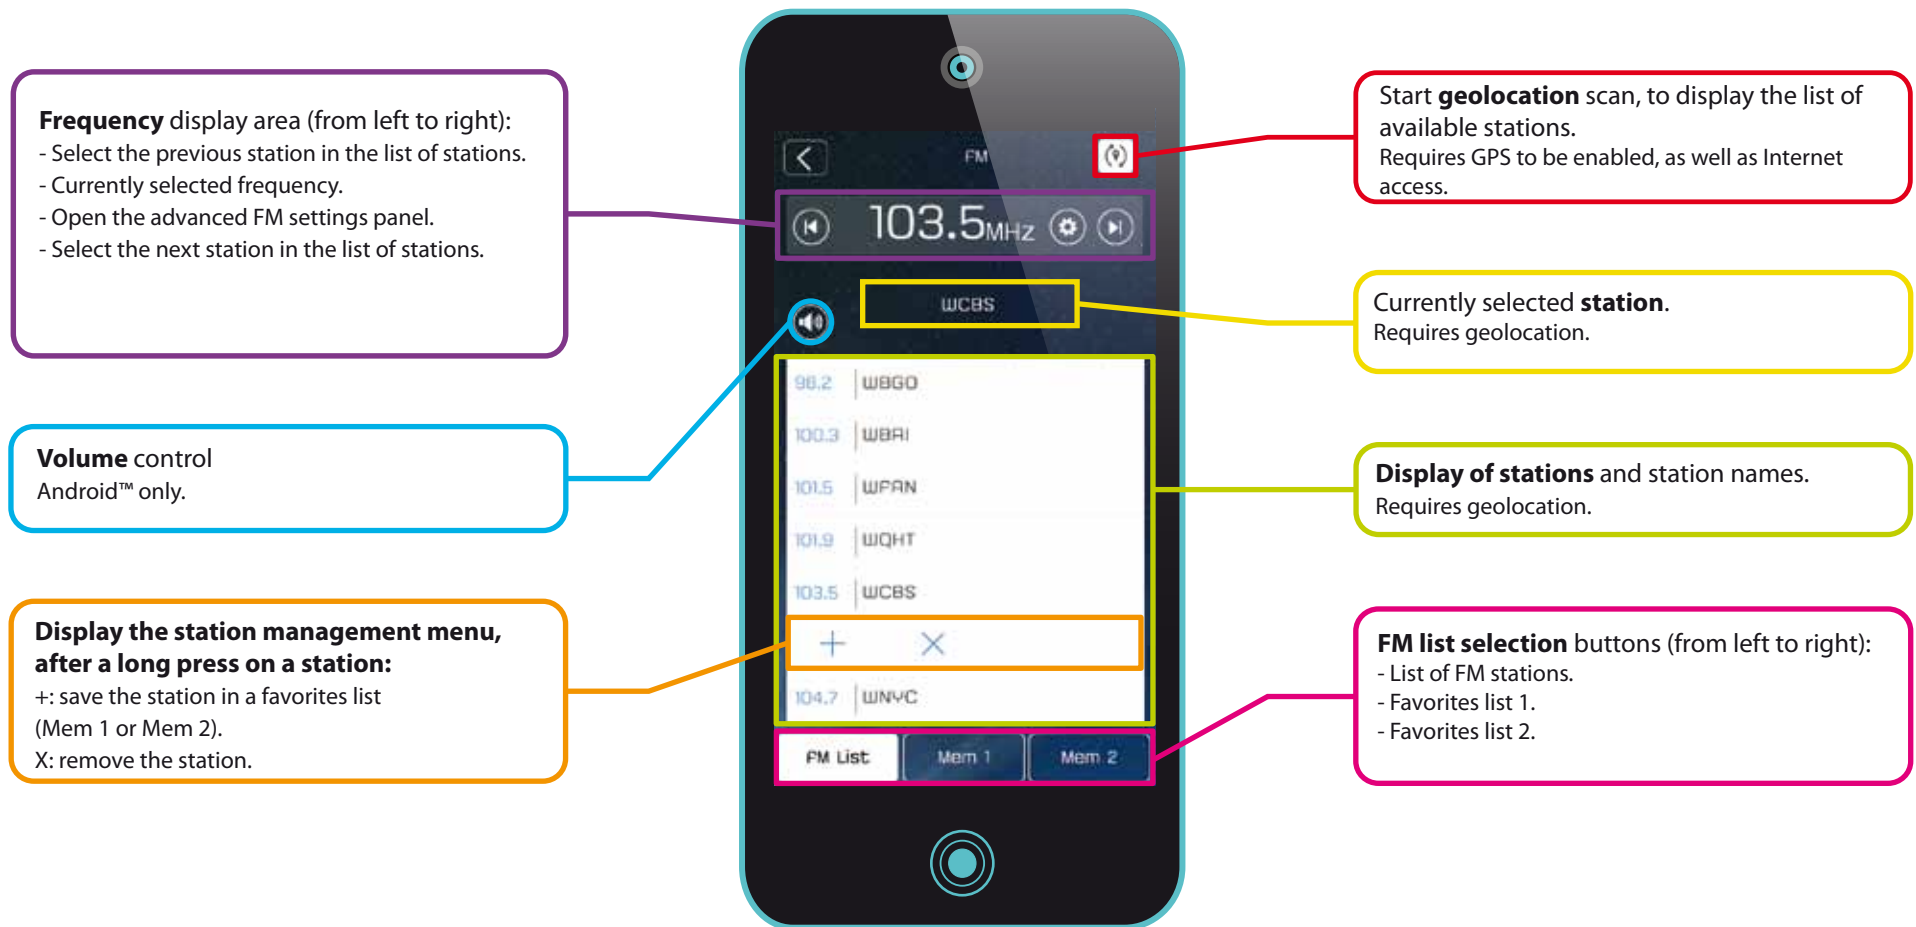

FM PANEL

The image shows a smartphone screen with the 'Speaker's FM settings' interface. The screen displays a frequency of 103.5 MHz for station WCBS. Below the frequency is an 'FM Save' button. Further down are 'EU/US Settings' with 'EU' and 'US' options, and a toggle for 'Automatic frequency update of your favorite stations via geolocation feature'. Callouts point to these elements with the following text:

- Back button, to return to the previous panel (in iOS).** Use the ↩ Back button in Android.
- Automatically search** for a station before or after the currently selected frequency.
- Manually select a frequency.**
- Save the station.**
- Select the speaker's FM settings:** Europe or US. A new geolocation scan is required each time this setting is changed.
- Enable/disable automatic frequency updating** of your favorites lists during a geolocation scan.

Advanced FM settings

ADVANCED SETTINGS PANEL



Advanced settings