The Virtual DJ volume and pitch functions are inverted compared to Hercules DJ Console's buttons. Can I adjust this so that they are the same?
Yes: click on the SET button in Virtual DJ and then change the DJC pitch/vol option

to **Normal** instead of **Inverted**.