 
 


## How can I manually assign an IP address to my computer on a system running Windows XP?

 
To configure your computer's IP address on a system running Windows XP, you must go to your system's "Control Panel". To do so, click "Start/Settings" and then "Control Panel". In the Control Panel, click the "Network and Internet Connections" link, then "Network Connections" (or simply double-click "Network Connections" in the Control Panel).

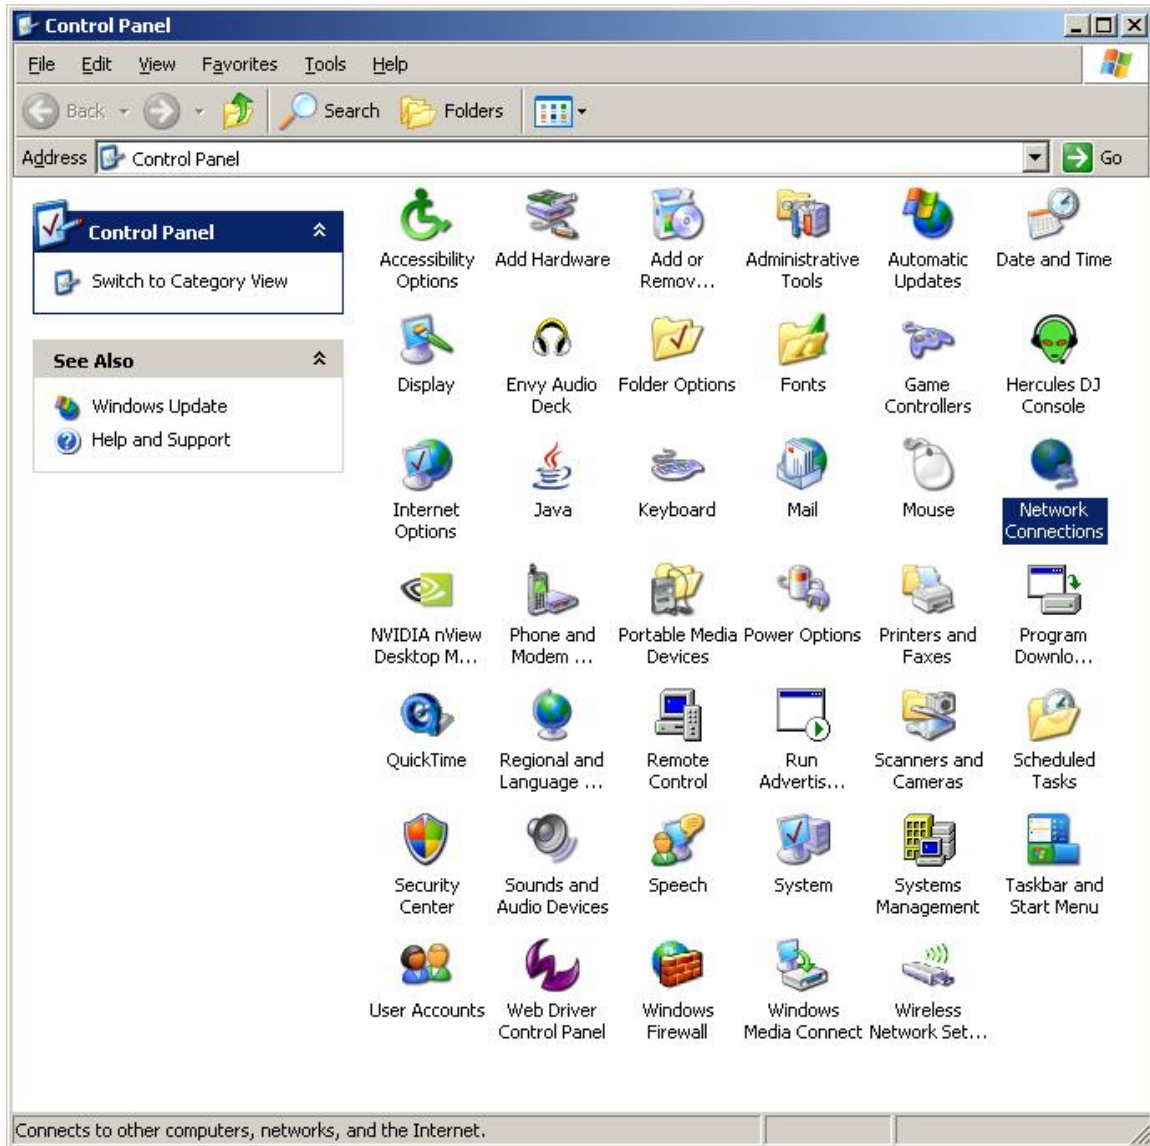

Right-click your network connection whose "Device Name" is "Hercules Wireless G..." and select "Properties".

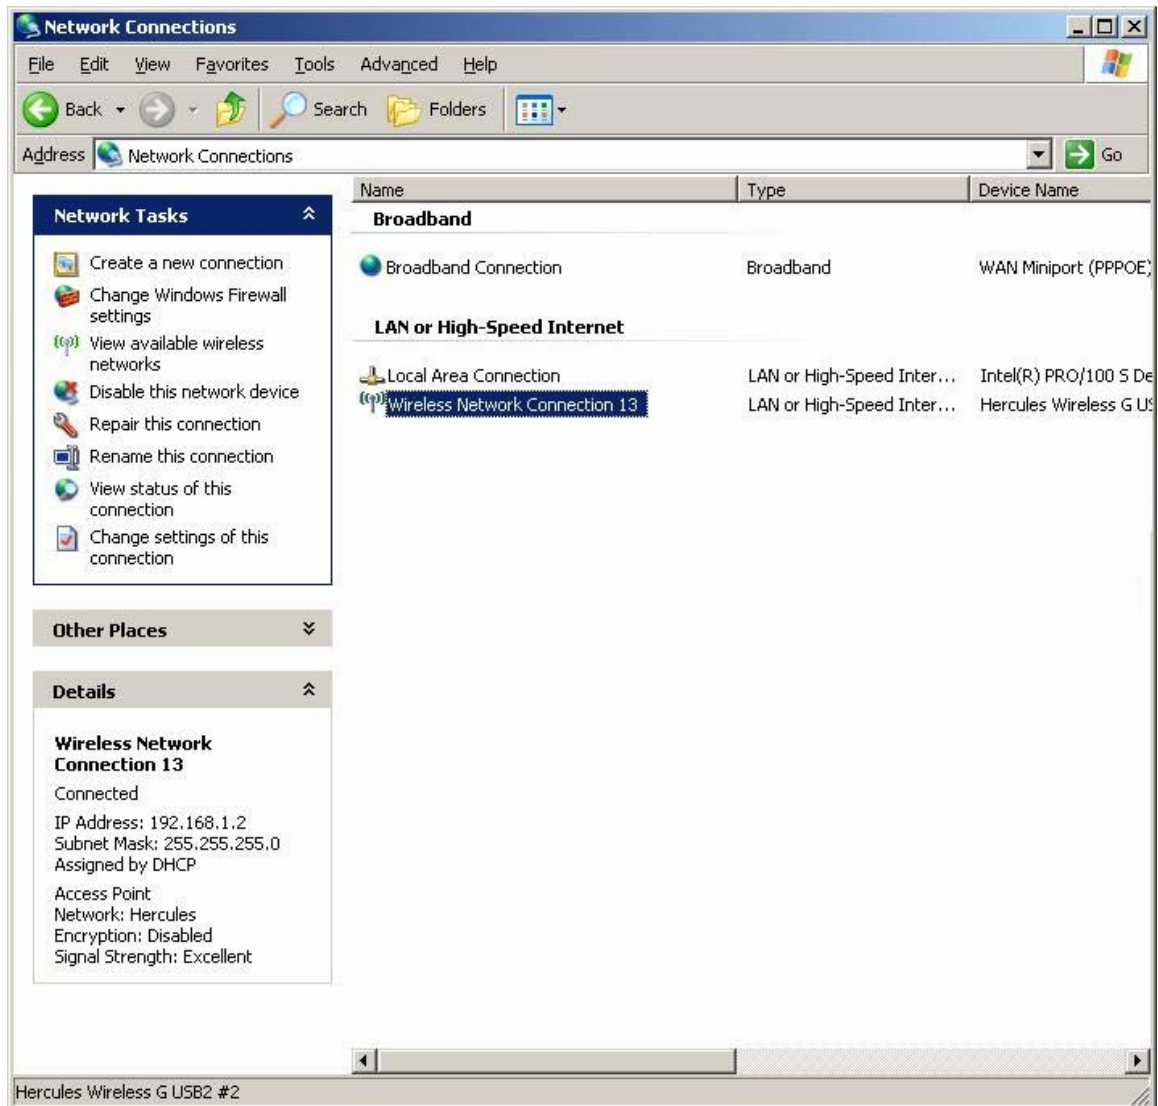


In the "Wireless Network Connection Properties" window that appears, select the "General" tab. Select "Internet Protocol (TCP/IP)", then click the "Properties" button.

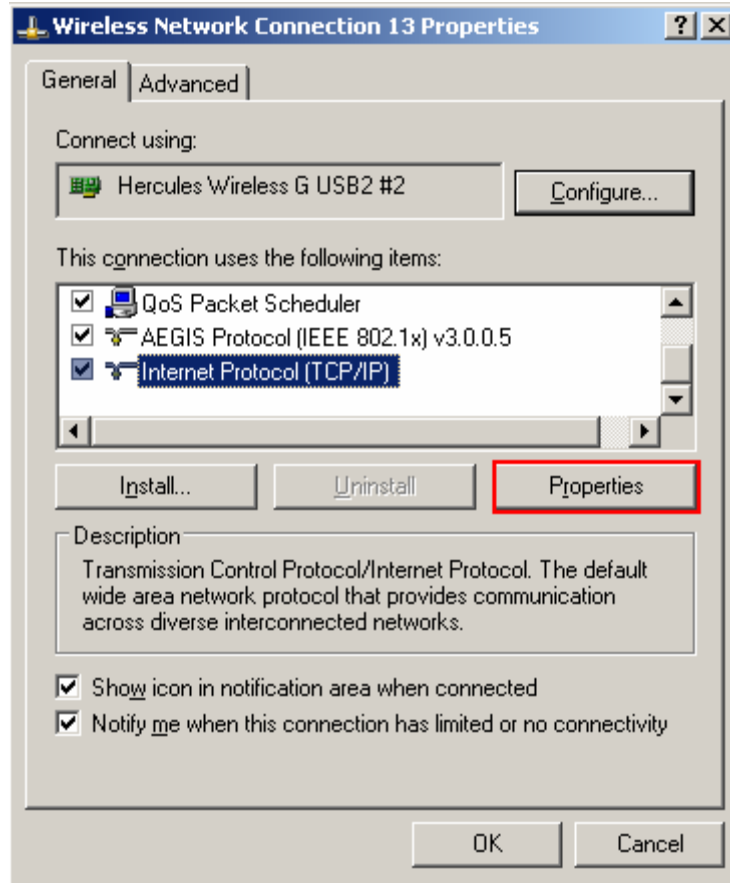

In the new window that appears, select the *"Use the following IP address"* option and enter your choice of IP address.

 We recommend that you select *"192.168.1.x"* for your IP address (replace the *"x"* with a number between 2 and 254) and *"255.255.255.0"* for your Subnet mask. For the Default gateway, enter *"192.168.1.1"* (the Hercules Modem router's default address).

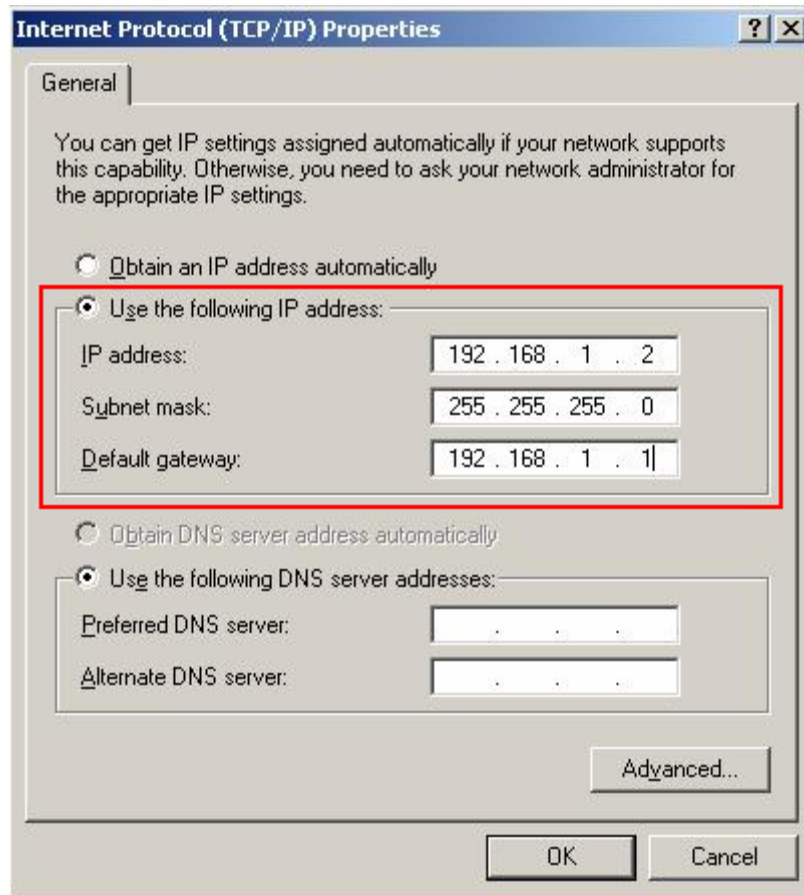

Validate the changes by clicking "OK".