


## How should I configure my Smart TV card for TV reception and video input?

Once you are certain your card is installed correctly, Wind DVR (or any other software you may wish to use) needs to be configured according to the usage you want to make.

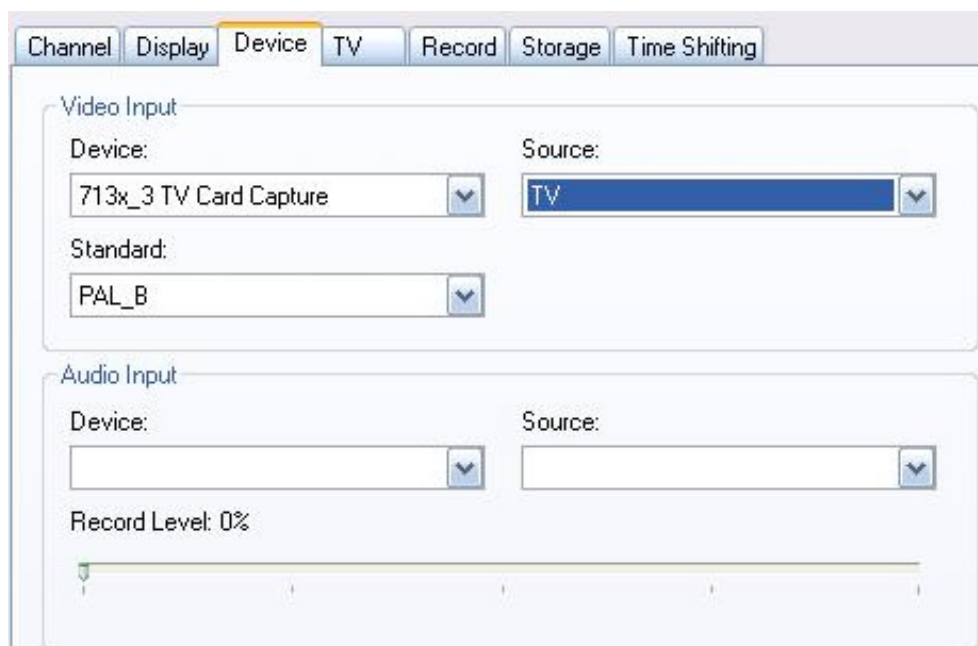

This configuration is the default for TV reception. If you want to use the Smart TV to recording an external video source (VCR, camera), you would need to select the connector use for capture (composite or S-Video) under **SOURCE**.

For the **STANDARD**, select the format according to your location AND the format supported by your card (this information should be indicated on the card itself and near the bar code on the box)

For the **Audio input**, it should reflect the settings of your soundcard (LINE IN is selected as Recording source, and that it is not muted on playback). Also be sure you have linked the AUDIO OUT of your Smart TV card to the LINE IN of your soundcard

