

## Why can't I enable "Direct Monitoring" in Cubase as indicated in the 16/12 FW user manual?

This is an error to the manual that could not be corrected before release. The 16/12 FW drivers do not permit the use of Direct Monitoring.

However, as explained in the manual (section 5.4: **MONITORING**), it is possible to monitor each stereo pairs independently from the 16/12 FW control panel. As this is done directly in hardware, no latency will be created.