


How can I enable / disable the « DJ mouse » function of the DJ Console MP3?

First note that **Virtual DJ** disables the **DJ Mouse** option upon launch, as it uses the ministick for browsing.

However it is possible to enable this function back in the **Device Manager**:

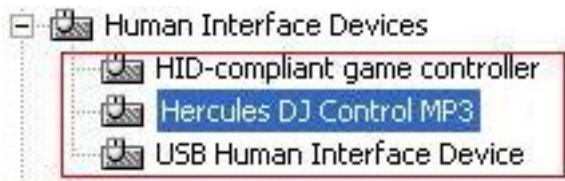

- Double-click on **DJ CONTROL MP3** to open the properties window, then go to the **Configure** tab.

