

Why do I get the message “Display disabled in Real Player”?

The reason why the LCD was disabled is that, unlike other software, Real player doesn't provide external access to song information, making it impossible for us to display something on screen.

However, basic control functionalities are still available.