

**The display screen of the Tunes Explorer Wireless flickers.  
What is the problem?**

This behavior usually indicate that the batteries don't provide enough power to the remote and needs to be changed or recharged (if using rechargeable batteries).

If you've already tried new batteries and the problem persists, you remote might be defective. We recommend that you bring back the Tunes Explorer Wireless remote to your retailer to proceed to an exchange.