

The scratch mode does not seem to work. The scratch button is On, but the jog wheels don't produce a scratch sound in VirtualDJ.

Check on the underside of your DJ Console 4-Mx and make sure the 2 vertical locks of the jog wheels are in **Unlock** position.

