

## Configuring Traktor Pro/Duo for the DJ Control MP3 e2 (Windows version)

### ***1- Configuration of the MIDI channel***

From the DJ Console control panel, make sure that **MIDI channel for controls** is set to **1**.

This is very important as the profile provided is configured for the DJ Control MP3 e2 to work on this channel.

If you have multiple MIDI controllers, or would like to use the DJ Console on a different MIDI channel, you will need to modify the profile accordingly. Consult Traktor's user manual for more details.



### ***2- Audio configuration in Traktor***

As the DJ Control MP3 e2 is only a MIDI controller, you will need to configure Traktor audio setup in order to use your sound card for playback and monitoring on separate stereo channels (Consult the user manual for more details).



### 3- Configuration of the Midi controllers in Traktor Pro/Duo (Version 1.27)

a. At the bottom of the configuration menu, click the **Import** button to locate and select the **.TSI** configuration file.



b. **Controller Mapping, MIDI Device Setup** and **Effects Settings** should be selected before clicking OK



c. In **Controller-Manager**:

-For Device, select **Generic MIDI-DJ Control MP3 e2**

- Do the same for both **In-Port** and **Out-Port**.

This menu also give you access to the various MIDI settings, should you wish to modify them.



## **MIDI Layout for the DJ Control MP3 e2 and Traktor Pro/Duo**


**NOTE:** The terms used are those employed in Traktor

### Main Configuration:

- A-** Key Lock
- B-** Tempo
- C-** Tempo Bend (Down/Up)
- D-** Sync
- E-** Seek position (Backward/Forward)
- F-** EQ (Bass/ Mid/ Treble) and EQ Kill
- G-** Scratch On/Off
- H-** Jog Scratch + Tempo Bend
- I-** Monitor Cue
- J-** Load Selected
- K-** Volume Fader
- L-** Cue
- M-** Play/Pause
- N-** X-Fader



## Navigation/ browser:

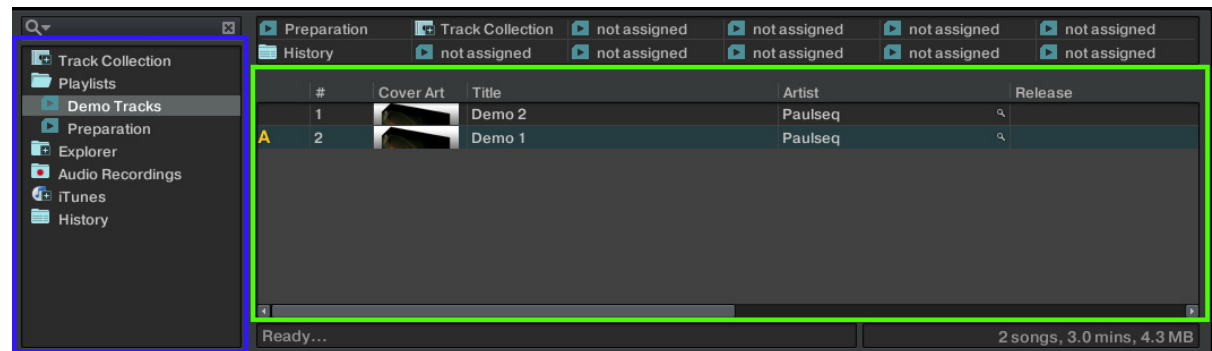

## Folder navigation

**Folder** + ↑ ↓ : Step browsing

**Folder (A)** + Left Jog Wheel:  
Fast browsing

**Folder (A)** + LOAD A:  
Expand/Collapse

## Playlist navigation (Default)

↑ ↓ : Step browsing

**File (B)** + Right Jog Wheel:  
Fast browsing




## Loops / FX:

1- Loop Set (In/Out)

2- Filter (Press and hold)

You can modify the value of the filter using the deck's **PITCH** knob.

3 -4 : Loop Size (- /+)

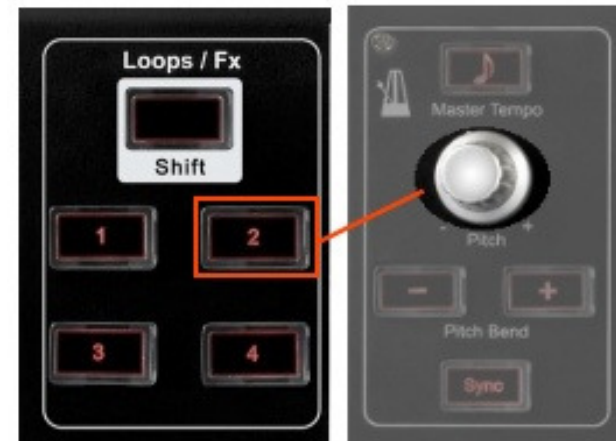

5- Effect 1 On

6- Effect 2 On

7- Effect 3 On

8- Effect unit 1 On (Deck A) / Effect unit 2 On (Deck B)



### Secondary functions:

Press and hold **Automix** to access the secondary functions

**A-** Monitor Mix


**B-** Monitor Volume



### Midi controllers map





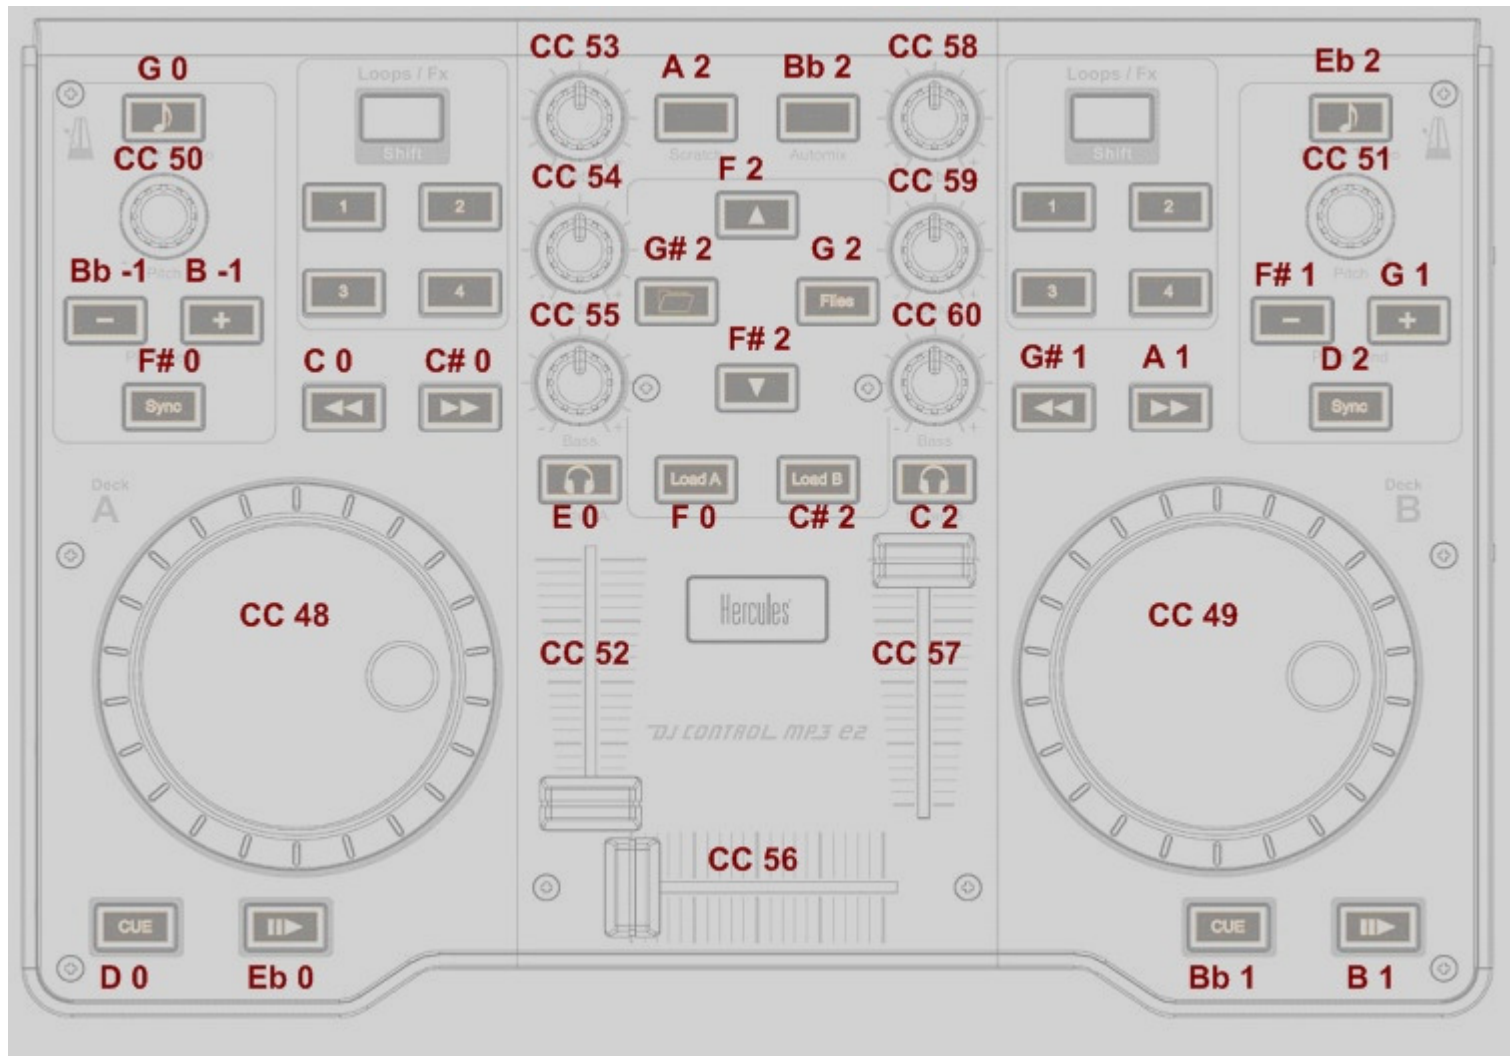

**Deck A****Deck B**

- |          |      |
|----------|------|
| 1) C# -1 | A 0  |
| 2) D -1  | Bb 0 |
| 3) Eb -1 | B 0  |
| 4) E - 1 | C 1  |
| <hr/>    |      |
| 5) F -1  | C# 1 |
| 6) F# -1 | D 1  |
| 7) G -1  | Eb 1 |
| 8) G# -1 | E 1  |

